

MITEL

# 5000 Communications Platform (CP)



## Administrator Phone Guide



# System and Diagnostics Administrator Features

## Quick Reference Guide

This guide provides information for frequently used administrator phone features. For more information about these and other features, refer to the main *Administrator Phone Guide*.

### Enabling or Disabling System Diagnostics Mode

While on-hook, enter the Diagnostics Mode feature code (**9900** or **9100**) to enable/disable diagnostics mode. DIAGNOSTICS ON/OFF appears. Then enter one of the following diagnostics feature codes shown below.

| Feature Name  | Code (U.S./Eur.)        |
|---|-------------------------|
| Diagnostic – ASAI Snoop Off                         | 9926/9126               |
| Diagnostic – ASAI Snoop On                          | 9927/9127               |
| Diagnostic – Dump Extension                         | 9933/9133               |
| Diagnostic – Dump Node Info                         | 9936/9136               |
| Diagnostic – Heap Dump                              | 9943/9143               |
| Diagnostic – Heap Statistics                        | 9947/9147               |
| Diagnostic – ISDN View                              | 9948/9148               |
| Diagnostic – Major Reset                            | 9962/9162               |
| Diagnostic – Mark as Leaks                          | 9945/9145               |
| Diagnostic – Mark as Quiescent                      | 9946/9146               |
| Diagnostic – Minor Reset                            | 9964/9164               |
| Diagnostic – Network Freeze Zone - System Histories | 9939/9139               |
| Diagnostic – Network Groups                         | 9963/9163               |
| Diagnostic – Network Unfreeze Zone - System History | 9989/9189               |
| Diagnostic – Print Auxdata                          | 9972/9172               |
| Diagnostic – Print Message Log                      | 9975/9175               |
| Diagnostic – Print Network Log                      | 9976/9176               |
| Diagnostic – Query Node Traffic                     | 9978/9178               |
| Diagnostic – Show Version                           | 9928/9128               |
| Diagnostic – SIP View                               | 9987/9187               |
| Diagnostic – Spare 1–3                              | 9910-9912/<br>9110-9112 |
| Diagnostic – System History                         | 9974/9174               |
| Diagnostic – View Displays                          | 9983/9183               |
| Seize Device  | 9973/9173               |
| System History Freeze                               | 9993/9193               |
| System History Unfreeze                             | 9998/9198               |

### Default Administrator Feature Codes

| Feature Name                          | Code (U.S./Eur.) |
|---------------------------------------|------------------|
| Automatic Diagnostics Delivery On/Off | 9823             |
| Clear Network Alarm                   | 9851             |
| Clear System Alarm                    | 9850             |
| Compression On/Off                    | 9982/9182        |
| Compression Statistics                | 9981/9181        |
| Diagnostics On/Off                    | 9900/9100        |
| Enable Network Day                    | 9862             |
| Enable Network Night                  | 9861             |
| Modem Disable                         | 9867             |
| Modem Enable                          | 9866             |
| Modem Reset                           | 9869             |
| Night Ring On/Off                     | 9860             |
| Periodic Diagnostics On/Off           | 9825             |
| Program Database                      | 9932/9132        |
| Program System Speed Dial             | 9801             |
| Set Network Date/Time                 | 9810             |
| Set Time/Date                         | 9800             |
| Synchronize Network Time              | 9811             |

Use the administrator phone to program the following system features.

### Setting the System Day or Night Mode

Dial **9860**. NIGHT MODE IS ON (or OFF) appears followed by THE SYSTEM IS IN NIGHT MODE, if the system is in Night Mode. In Day Mode, the display returns to the idle state.

### Responding to Alarm Messages

1. When a minor alarm indication appears, write down the alarm information.
2. While on-hook, dial **9850** (Clear System Alarm) or dial **9851** (Clear Network Alarm).
3. Look up the alarm in the administrator guide and take the appropriate action.

## Setting the System or Network Date and Time

1. Dial **9800** (single node) or **9810** (multi-node). The programmed date appears.
2. Use the dialpad buttons to enter the month, day, and year. For example, enter **020308** for February 3, 2008.
3. Use the dialpad buttons to enter the time in hours and minutes. For example, enter **0900** for 9:00.
4. If the system is set for 12-hour display format, SELECT AM OR PM appears. Press **1** (or the **AM** menu button) for A.M. or press **2** (or the **PM** menu button) for P.M. SYSTEM DATE AND TIME UPDATED appears.

## Synchronizing Network Time

Dial **9811**. NETWORK TIME SYNCHRONIZED appears.

## Programming System Speed-Dial Numbers

1. Dial **9801**. PROGRAM SYS SPD # <number range> appears.
2. Enter the System Speed Dial location code (**000–999** or **0000–4999**). ENTER NAME <current name> appears.
3. Enter the name or leave the existing name. See the table below for dialpad characters.
4. Press **#** or the **ACCEPT** menu button. ENTER NUMBER appears.
5. Enter the number, up to 48 digits, using one of the following methods:
  - Press the **REDIAL** menu button to enter the last *external* number dialed or saved.
  - Use the dialpad to enter the number. In Numeric Mode, you can press **#** to enter a hyphen (-) or press **\*** to enter a colon (:). If you make a mistake, press the backspace button to delete the last characters entered.
6. Press **#** or the **ACCEPT** menu button to save the number. SYS SPD BIN # <number> UPDATED appears.

| Button | Number of Times Dialpad Button is Pressed |   |   |   |   |   |     |   |   |    |    |    |    |    |    |
|--------|---|---|---|---|---|---|-----|---|---|----|----|----|----|----|----|
|        | 1   | 2 | 3 | 4 | 5 | 6 | 7   | 8 | 9 | 10 | 11 | 12 | 13 | 14 | 15 |
| 1      | :   | - | / | , | . | ; | ( ) | & | + | *  | !  | ?  | #  | 1  |    |
| 2      | A   | B | C | 2 | a | b | c   |   |   |    |    |    |    |    |    |
| 3      | D   | E | F | 3 | d | e | f   |   |   |    |    |    |    |    |    |
| 4      | G   | H | I | 4 | g | h | i   |   |   |    |    |    |    |    |    |
| 5      | J   | K | L | 5 | j | k | l   |   |   |    |    |    |    |    |    |
| 6      | M   | N | O | 6 | m | n | o   |   |   |    |    |    |    |    |    |
| 7      | P   | Q | R | S | 7 | p | q   | r | s |    |    |    |    |    |    |
| 8      | T   | U | V | 8 | t | u | v   |   |   |    |    |    |    |    |    |
| 9      | W   | X | Y | Z | 9 | w | x   | y | z |    |    |    |    |    |    |
| 0      | 0   |   |   |   |   |   |     |   |   |    |    |    |    |    |    |

### NOTE

The chart above applies to the Mitel 52xx/53xx IP phones, 8660 IP phone, and 8528, 8568, and 8560 digital telephones when equipped with version 5.0 software. Charts for other supported languages and other supported phones are located in the main *Administrator Phone Guide* and the latest phone user guides.

Part Number  
580.8001



# Mitel 5000 Communications Platform (CP) Administrator Phone Guide

Issue 5.0, February 2011



## Notice

This document is released by Mitel Networks Corporation as a guide for administrator phone users. It provides information necessary to properly administer the system using a designated administrator phone.

The contents of this document reflect current company standards and are subject to revision or change without notice. Some features or applications mentioned may require a future release and are not available in this release. Future product features are subject to availability and cost. Some features may require additional hardware and/or specific software.

The contents of this guide may include technical or other inaccuracies. Mitel reserves the right to make revisions or changes without prior notice. Software packages released after the publication of this guide will be documented in addenda to the guide or succeeding issues of the guide.

**For sales, service, or technical support, contact you local authorized Mitel provider.**

---

Enter provider information above.

If you do not know the contact information for your local provider, use the “Partners – Mitel Partner Locator” link at the top of the [Mitel Web site](http://www.mitel.com) (www.mitel.com) to locate a nearby office.

If you have any questions or comments regarding this guide or other technical documentation, contact the Technical Publications Department (USA) at:

[tech\\_pubs@mitel.com](mailto:tech_pubs@mitel.com)

Mitel® is a registered trademark of Mitel Networks Corporation.

All other trademarks mentioned in this document are the property of their respective owners, including Mitel Networks Corporation. All rights reserved.

© 2005–2011 Mitel Networks Corporation

Personal use of this material is permitted. However, permission to reprint/republish this material for advertising or promotional purposes or for creating new collective works for resale or redistribution to servers or lists, or to reuse any copyrighted component of this work in other works must be obtained from Mitel Networks Corporation.





# Contents

|  |           |
|--|-----------|
| <b>Overview</b>  | <b>1</b>  |
| <b>Introduction</b>  | <b>2</b>  |
| Administrator Types  | 2         |
| Additional References                                      | 3         |
| <b>System Networks and Nodes</b>                           | <b>3</b>  |
| <b>Multicultural English References</b>                    | <b>4</b>  |
| <b>Phone and System Administration</b>                     | <b>5</b>  |
| <b>Introduction</b>  | <b>7</b>  |
| Phone Feature Button Differences                           | 7         |
| Supported Languages and Dialpad Character Descriptions     | 7         |
| <b>Single-Node and Network (Multi-Node) Configurations</b> | <b>12</b> |
| System Day and Night Modes                                 | 12        |
| Setting a Single-Node System in Day or Night Mode          | 12        |
| Selecting Nodes for Day or Night Mode                      | 12        |
| <b>System Date and Time</b>                                | <b>13</b> |
| Setting the System Date and Time                           | 13        |
| Synchronizing Network Times                                | 13        |
| <b>System Speed Dial</b>                                   | <b>14</b> |
| <b>Configuration Assistant</b>                             | <b>15</b> |
| <b>Station (Phone) Programming Options</b>                 | <b>16</b> |
| Enabling or Disabling Other Phones as Administrator Phones | 16        |
| Enabling or Disabling Attendant Phones                     | 17        |
| Programming Extension User Names                           | 18        |
| Programming Phone Toll Restrictions                        | 19        |
| <b>System Programming Options</b>                          | <b>23</b> |
| Entering an Administrator Phone Passcode                   | 23        |
| Changing Do-Not-Disturb (DND) Messages                     | 24        |
| Changing Default Reminder Messages                         | 25        |
| Changing Phone Extension Numbers                           | 26        |
| Swapping Phone Extension Numbers                           | 27        |

|  |           |
|--|-----------|
| <b>Individual Trunk Programming Options</b> .....        | <b>29</b> |
| Programming the Trunk Answer Supervision Type .....      | 29        |
| Programming Caller ID .....                              | 31        |
| Programming the Hybrid Balance Option .....              | 32        |
| Programming DTMF or Dial Pulse Signalling .....          | 33        |
| Programming Trunk Group Assignments .....                | 34        |
| Programming the Busy Trunk Option .....                  | 35        |
| <b>Trunk Group Programming Options</b> .....             | <b>36</b> |
| Programming Trunk Group Day or Night Answer Access ..... | 36        |
| Programming Trunk Group Day or Night Ring-in .....       | 37        |
| Programming Trunk Group Toll Restrictions .....          | 38        |
| Programming Trunk Group Trunk Lists .....                | 39        |
| <b>Alarms</b> .....                                      | <b>42</b> |
| Alarm Types .....  | 42        |
| Network Alarms .....                                     | 42        |
| Alarm Differences .....                                  | 43        |
| Responding to Alarms .....                               | 43        |
| Clearing Alarms .....                                    | 44        |
| <b>Internal Modem</b> .....                              | <b>46</b> |
| Enabling or Disabling the Internal Modem .....           | 46        |
| Resetting the Internal Modem .....                       | 46        |
| <b>Network Group Diagnostics</b> .....                   | <b>47</b> |
| Running Network Group Diagnostics .....                  | 47        |
| Seizing a Device .....                                   | 48        |
| <b>History Freezes</b> .....                             | <b>49</b> |
| Freezing or Unfreezing the System History .....          | 49        |
| Freezing or Unfreezing the Network History .....         | 49        |

---

**Reference** **51**

---

**Troubleshooting Tips** ..... **52**

    System Administrator and Provider Information ..... 52

    Administrator Troubleshooting Tips ..... 52

**Programming Planning Sheets** ..... **53**

    Administrator Phone Passcode ..... 53

    Phone Information ..... 53

    Do-Not-Disturb Messages ..... 54

    Reminder Messages ..... 55

    Changing Station Extension Numbers ..... 56

    Swapping Stations ..... 56

    Individual Trunk Programming ..... 57

    Trunk Group Programming ..... 57

**Default Feature Codes** ..... **58**

    Administrator Feature Codes ..... 58

    Diagnostics Feature Codes ..... 59

    Trunk Access Codes ..... 62

    Phone Feature Codes ..... 62

**Index** **69**

---



---

# Overview

|   |          |
|---|----------|
| <b>Introduction</b> .....                       | <b>2</b> |
| Administrator Types .....                       | 2        |
| Additional References .....                     | 3        |
| Feature References .....                        | 3        |
| Previous Software and Hardware Versions .....   | 3        |
| Administrator Programming Planning Sheets ..... | 3        |
| <b>System Networks and Nodes</b> .....          | <b>3</b> |
| <b>Multicultural English References</b> .....   | <b>4</b> |

## Introduction

This *Mitel® 5000 CP Administrator Phone Guide* provides instructions on using your administrator phone to perform basic user and system administration on the Mitel 5000 Communications Platform (CP). For quick access to frequently used feature instructions, you can use the removable Quick Reference Guide included with this guide.

You must have access to an administrator phone, a phone designated to perform system and phone administrative tasks, to perform tasks described in this guide. The system administrator assigns the administrator phone in the 5000 CP Database (DB) Programming application. See “[Administrator Types](#)” below.

For ease of use, when programming administrator features and to manage system alarm messages, Mitel recommends using a display phone, such as the 5340 IP phone, 5360 IP phone, 8662 IP phone, 8660 IP phone, 8568 digital telephone, or 8560 digital telephone. You cannot use a single line (analog) phone as an administrator phone. See “[Phone Feature Button Differences](#)” on [page 7](#) for more details about these phones.

## Administrator Types

The following administrator types are referenced in this guide:

- **Phone administrator** (the audience for this guide): Uses the administrator phone to perform various administrative functions such as changing system modes, managing alarms, and programming basic phone features.
- **Voice Mail administrator**: Uses the administrator voice mailbox to perform end-user level voice mail administration. Refer to the appropriate Voice Mail Administrator Guide:
  - For Enterprise® Messaging and Unified Voice Messaging (previously referred to as Basic Voice Mail), refer to the *Unified Voice Messaging and Enterprise Messaging Administrator Guide*, part number 580.8009.
  - For NuPoint Unified Messaging (UM), refer to the NuPoint documentation at [Mitel Online Web site](http://www.edocs.mitel.com) (<http://www.edocs.mitel.com>). For NuPoint administration, refer to the *Web Console Help* and the *Technical Documentation Online Help*.
- **System administrator**: Uses the 5000 CP DB Programming application to configure all phone system and voice mail features for your organization. Your system administrator may be on site, or you may rely on your local Mitel provider (the company that installed your phone system and now services it) for system administration. All sales, service, and technical support are handled at the local level by your authorized Mitel provider. If you do not know the contact information for your local provider, use the “Partners – Mitel Partner Locator” link at the top of the [Mitel Web site](http://www.mitel.com) ([www.mitel.com](http://www.mitel.com)) to locate a nearby office.
- **Network administrator**: Maintains the network and performs network-related tasks.

## Additional References

Refer to the following references for additional information.

### Feature References

The administrator phone functions as both a standard system phone and an administrator phone. However, because this guide describes features that are programmed from the administrator phone only, refer to the appropriate phone user guides for detailed feature descriptions and end-user instructions.

### Previous Software and Hardware Versions

This guide provides instructions for Mitel 5000 CP v5.0 software. You may find that some features referenced in this guide do not apply to your system. For more information, refer to the hardware or software manuals for your product or software version. Contact your local authorized Mitel provider (the company that installed your phone system and now services it) for more information. If you do not have the contact information for your local provider, use the “Partners – Mitel Partner Locator” link at the top of the [Mitel Web site](http://www.mitel.com) (www.mitel.com) to locate a nearby office.

### Administrator Programming Planning Sheets

You can use the included programming planning sheets to help you plan your site system and voice mail programming requirements. For programming planning sheets and default system feature codes, see the “Reference” chapter beginning on [page 51](#).

## System Networks and Nodes

Two or more 5000 CP systems can be connected to form a network, providing a seamless interface between the systems. For example, a 5000 CP in Phoenix, Arizona can be connected to another 5000 CP in Tampa, Florida. System users can place calls across the network to other extensions as if they were in the same building. However, each system can have its own time settings, call configurations, System Speed-Dial contacts, and so on.

In this guide, all references to a *network* mean two or more connected systems. Each system in a network is called a *node*.

The maximum capacities for networking appear in [Table 1](#).

**Table 1.** *System Network Capacities*

| Network Node or Device    | Capacity            |
|---------------------------|---------------------|
| System Nodes per network  | 99                  |
| Local devices per node    | 304 <sup>1</sup>    |
| Off-node devices per node | 10,000 <sup>2</sup> |
| Devices per network       | 40,000              |

1. The maximum number of phones and trunks that can be installed is limited by the number of voice channels and system memory resources available.
2. Depends on system licensing.

## Multicultural English References

This guide is intended for audiences in the United States (U.S.) and in the Mitel European market, which includes the United Kingdom (U.K.). Because of this dual support, dual references are made to industry features, standards, and jargon, as appropriate throughout the document. For the purposes of this administrator guide, British English terms are assumed to apply to other English-speaking European cultures, as well.

For example, the U.S. telecom industry refers to an audio communication line between a public switching system and a private switching system as a “central office (CO) trunk.” In the U.K., this same type of line is called a “local exchange trunk.”

This guide does not make a distinction between American English and British English spellings of common words. Only American English spellings appear in this manual. For example, the word “analog” is not spelled as “analogue.”



# Phone and System Administration



- Introduction** ..... 7
  - Phone Feature Button Differences ..... 7
  - Supported Languages and Dialpad Character Descriptions ..... 7
- Single-Node and Network (Multi-Node) Configurations** ..... 12
  - System Day and Night Modes ..... 12
  - Setting a Single-Node System in Day or Night Mode ..... 12
  - Selecting Nodes for Day or Night Mode ..... 12
- System Date and Time** ..... 13
  - Setting the System Date and Time ..... 13
  - Synchronizing Network Times ..... 13
- System Speed Dial** ..... 14
- Configuration Assistant** ..... 15
- Station (Phone) Programming Options** ..... 16
  - Enabling or Disabling Other Phones as Administrator Phones ..... 16
  - Enabling or Disabling Attendant Phones ..... 17
  - Programming Extension User Names ..... 18
  - Programming Phone Toll Restrictions ..... 19
- System Programming Options** ..... 23
  - Entering an Administrator Phone Passcode ..... 23
  - Changing Do-Not-Disturb (DND) Messages ..... 24
  - Changing Default Reminder Messages ..... 25
  - Changing Phone Extension Numbers ..... 26
  - Swapping Phone Extension Numbers ..... 27
- Individual Trunk Programming Options** ..... 29
  - Programming the Trunk Answer Supervision Type ..... 29
  - Programming Caller ID ..... 31
  - Programming the Hybrid Balance Option ..... 32
  - Programming DTMF or Dial Pulse Signalling ..... 33
  - Programming Trunk Group Assignments ..... 34
  - Programming the Busy Trunk Option ..... 35
- Trunk Group Programming Options** ..... 36
  - Programming Trunk Group Day or Night Answer Access ..... 36
  - Programming Trunk Group Day or Night Ring-in ..... 37
  - Programming Trunk Group Toll Restrictions ..... 38
  - Programming Trunk Group Trunk Lists ..... 39

- Alarms** ..... 42
  - Alarm Types ..... 42
  - Network Alarms ..... 42
  - Alarm Differences ..... 43
  - Responding to Alarms ..... 43
  - Clearing Alarms ..... 44
- Internal Modem** ..... 46
  - Enabling or Disabling the Internal Modem ..... 46
  - Resetting the Internal Modem ..... 46
- Network Group Diagnostics** ..... 47
  - Running Network Group Diagnostics ..... 47
  - Seizing a Device ..... 48
- History Freezes** ..... 49
  - Freezing or Unfreezing the System History ..... 49
  - Freezing or Unfreezing the Network History ..... 49

 


 

 
# Introduction

You can use a designated administrator phone for several simple system administrative tasks. Mitel recommends using a larger-size display phone, such as the Mitel 5340, 5360, 8662, 8660, 8568, or 8560 phone to administer the system. You may notice some feature differences between the phone types, as described below.

## Phone Feature Button Differences

Table 2 describes differences between the Mitel 5340, 5360, 8662, 8660, 8568, and 8560 phones when using feature buttons to enter dialpad characters or activate features. For ease of use, this guide refers to buttons in procedures by name instead of the icon designation. For example, a procedure may refer to the **Backspace** button, which can be either the  (Mute) button (models 8662, 8660, and 8560) or the  (Hold) button (models 5340, 5360, and 8568). Refer to the appropriate phone user guide for detailed phone feature descriptions.

**Table 2.** Mitel 8560, 8568, 8660, 8662, 5340, and 5360 Phone Button Differences

| Button as Referenced in Procedures  | Mitel 8560, 8660, and 8662  | Mitel 5340 5360, and 8568  |
|---|---|--|
| <b>Backspace:</b> Moves the cursor to the previous position when entering characters. |  (Mute)    |  (Hold)     |
| <b>Forward:</b> Moves the cursor to the next position when entering characters.       |  (Forward) |  (Transfer) |
| <b>Special:</b> Sometimes required to enter feature codes.                            |  (Special) |  (Special)  |

## Supported Languages and Dialpad Character Descriptions

In addition to US English, UK English, Mexican Spanish, and Japanese, v4.0 or later software supports Canadian (Quebec) French. Any of these five languages can be designated as primary or secondary languages in the system.

The Change Language feature code (default is 301) allows phone users to switch between the system’s designated primary language and the phone’s designated secondary language. Once a language is selected, all of the displays on that phone will represent the chosen language (except for diagnostic displays, which are presented in English only, and custom feature and trunk labels, which are presented as programmed). Likewise, all of the voice prompts on that phone will represent the chosen language (except for Enterprise Messaging, which does not support Canadian French).

### Custom Characters

Various features such as Do-Not-Disturb, Station Speed Dial, etc. allow users to enter custom characters via their phone’s dialpad. Depending on which language the phone is using, the custom characters may change. The charts on the following pages show which custom characters the user will enter depending on the number of times each dialpad button is pressed. Users may now enter both lowercase and uppercase characters instead of the uppercase-only restriction in place prior to v4.0.

When entering dialpad characters:

- To switch from Alpha Mode to Numeric Mode, press the **Message** button (button designation depends on phone type) or the **USE ALPHA MODE/USE NUMERIC MODE** menu button. The Message button and lamp button are lit in Alpha Mode. They are off in Numeric Mode.
- In Numeric Mode, you can press # for a hyphen (-) or \* for a colon (:).

## Phone and System Administration

### Phones Supporting Newer Character Bitmaps

---

The following table summarizes which phones use which character bitmaps when the system is equipped with v4.0 or later software. See the following pages for character bitmap charts.

**Table 3.** *Phones and Supported Character Bitmaps with Version 4.0 or Later Software*

| Phones     | Newer Character Bitmaps |         |                 | Older Character Bitmaps |         |          |
|------------|-------------------------|---------|-----------------|-------------------------|---------|----------|
|            | US & UK                 | Spanish | French Canadian | US, UK, Fr-Can          | Spanish | Japanese |
| 52xx/53xx  | √                       | √       | √               |                         |         |          |
| 8560/8660  | √                       | √       | √               |                         |         | √        |
| 8528/8568  | √                       | √       | √               |                         |         | √        |
| All Others |                         |         |                 | √                       | √       | √        |

### Phones Supporting Newer Character Bitmaps

The Mitel 52xx/53xx IP phones, the 8660 IP phone, and the 8528, 8568, and 8560 digital telephones are able to support all of the newer character bitmaps required to fully support the Canadian French and Mexican Spanish languages. When using these phones, the following charts show which characters the user will enter depending on the number of times each dialpad button is pressed.

**Table 4. Custom Dialpad Characters — US English and UK English**

| Button | Number of Times Dialpad Button is Pressed |   |   |   |   |   |     |   |   |    |    |    |    |    |    |
|--------|---|---|---|---|---|---|-----|---|---|----|----|----|----|----|----|
|        | 1   | 2 | 3 | 4 | 5 | 6 | 7   | 8 | 9 | 10 | 11 | 12 | 13 | 14 | 15 |
| 1      | :   | - | / | , | . | ; | ( ) | & | + | *  | !  | ?  | #  | 1  |    |
| 2      | A   | B | C | 2 | a | b | c   |   |   |    |    |    |    |    |    |
| 3      | D   | E | F | 3 | d | e | f   |   |   |    |    |    |    |    |    |
| 4      | G   | H | I | 4 | g | h | i   |   |   |    |    |    |    |    |    |
| 5      | J   | K | L | 5 | j | k | l   |   |   |    |    |    |    |    |    |
| 6      | M   | N | O | 6 | m | n | o   |   |   |    |    |    |    |    |    |
| 7      | P   | Q | R | S | 7 | p | q   | r | s |    |    |    |    |    |    |
| 8      | T   | U | V | 8 | t | u | v   |   |   |    |    |    |    |    |    |
| 9      | W   | X | Y | Z | 9 | w | x   | y | z |    |    |    |    |    |    |
| 0      | 0   |   |   |   |   |   |     |   |   |    |    |    |    |    |    |

**Table 5. Custom Dialpad Characters — Mexican Spanish**

| Button | Number of Times Dialpad Button is Pressed |   |   |   |   |   |     |   |   |    |    |    |    |    |    |
|--------|---|---|---|---|---|---|-----|---|---|----|----|----|----|----|----|
|        | 1   | 2 | 3 | 4 | 5 | 6 | 7   | 8 | 9 | 10 | 11 | 12 | 13 | 14 | 15 |
| 1      | :   | - | / | , | . | ; | ( ) | & | + | *  | !  | ?  | #  | 1  |    |
| 2      | A   | B | C | 2 | A | b | c   | Á | Á |    |    |    |    |    |    |
| 3      | D   | E | F | 3 | D | e | f   | É | é |    |    |    |    |    |    |
| 4      | G   | H | I | 4 | G | h | i   | Í | Í |    |    |    |    |    |    |
| 5      | J   | K | L | 5 | J | k | l   |   |   |    |    |    |    |    |    |
| 6      | M   | N | O | 6 | M | n | o   | Ñ | Ó | ñ  | ó  |    |    |    |    |
| 7      | P   | Q | R | S | 7 | p | q   | r | s |    |    |    |    |    |    |
| 8      | T   | U | V | 8 | T | u | v   | Ú | Ü | ú  | ü  |    |    |    |    |
| 9      | W   | X | Y | Z | 9 | w | x   | y | z |    |    |    |    |    |    |
| 0      | í   | ¿ | ª | º | 0 |   |     |   |   |    |    |    |    |    |    |

**Table 6. Custom Dialpad Characters — Canadian French**

| Button | Number of Times Dialpad Button is Pressed |   |   |   |   |   |     |   |   |    |    |    |    |    |    |
|--------|---|---|---|---|---|---|-----|---|---|----|----|----|----|----|----|
|        | 1   | 2 | 3 | 4 | 5 | 6 | 7   | 8 | 9 | 10 | 11 | 12 | 13 | 14 | 15 |
| 1      | :   | - | / | , | . | ; | ( ) | & | + | *  | !  | ?  | #  | 1  |    |
| 2      | A   | B | C | 2 | A | b | c   | À | Â | Æ  | Ç  | à  | â  | æ  | ç  |
| 3      | D   | E | F | 3 | D | e | f   | È | É | Ê  | Ë  | è  | é  | ê  | ë  |
| 4      | G   | H | I | 4 | G | h | i   | Î | Ï | î  | ï  |    |    |    |    |
| 5      | J   | K | L | 5 | J | k | l   |   |   |    |    |    |    |    |    |
| 6      | M   | N | O | 6 | M | n | o   | Ô | Œ | ó  | œ  |    |    |    |    |
| 7      | P   | Q | R | S | 7 | p | q   | r | s |    |    |    |    |    |    |
| 8      | T   | U | V | 8 | T | u | v   | Ù | Û | ü  | ù  | û  | Û  |    |    |
| 9      | W   | X | Y | Z | 9 | w | x   | y | z | ÿ  | ÿ  |    |    |    |    |
| 0      | «   | » | 0 |   |   |   |     |   |   |    |    |    |    |    |    |

## Phones Supporting Old Character Bitmaps

All phones other than the Mitel 52xx/53xx IP phones, the 8660 IP phone, and the 8528, 8568, and 8560 digital telephones are unable to support all of the newer character bitmaps required to fully support the Canadian French and Mexican Spanish languages. However, they continue to support the limited subset of characters that were available prior to v4.0. When using these other phones, the following charts show which characters the user will enter depending on the number of times each dialpad button is pressed.

**Table 7.** Custom Dialpad Characters — US English, UK English, and Canadian French

| Button | Number of Times Dialpad Button is Pressed |   |   |   |   |   |   |   |   |    |    |    |    |    |    |
|--------|---|---|---|---|---|---|---|---|---|----|----|----|----|----|----|
|        | 1   | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 | 10 | 11 | 12 | 13 | 14 | 15 |
| 1      | :   | - | / | , | . | ; | ( | ) | & | +  | *  | !  | ?  | #  | 1  |
| 2      | A   | B | C | 2 | a | b | c |   |   |    |    |    |    |    |    |
| 3      | D   | E | F | 3 | d | e | f |   |   |    |    |    |    |    |    |
| 4      | G   | H | I | 4 | g | h | i |   |   |    |    |    |    |    |    |
| 5      | J   | K | L | 5 | j | k | l |   |   |    |    |    |    |    |    |
| 6      | M   | N | O | 6 | m | n | o |   |   |    |    |    |    |    |    |
| 7      | P   | Q | R | S | 7 | p | q | r | s |    |    |    |    |    |    |
| 8      | T   | U | V | 8 | t | u | v |   |   |    |    |    |    |    |    |
| 9      | W   | X | Y | Z | 9 | w | x | y | z |    |    |    |    |    |    |
| 0      | 0   |   |   |   |   |   |   |   |   |    |    |    |    |    |    |

**Table 8.** Custom Dialpad Characters — Mexican Spanish

| Button | Number of Times Dialpad Button is Pressed |   |   |   |   |   |   |   |   |    |    |    |    |    |    |
|--------|---|---|---|---|---|---|---|---|---|----|----|----|----|----|----|
|        | 1   | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 | 10 | 11 | 12 | 13 | 14 | 15 |
| 1      | :   | - | / | , | . | ; | ( | ) | & | +  | *  | !  | ?  | #  | 1  |
| 2      | A   | B | C | 2 | A | b | c |   |   |    |    |    |    |    |    |
| 3      | D   | E | F | 3 | D | e | f |   |   |    |    |    |    |    |    |
| 4      | G   | H | I | 4 | G | h | i |   |   |    |    |    |    |    |    |
| 5      | J   | K | L | 5 | J | k | l |   |   |    |    |    |    |    |    |
| 6      | M   | N | O | 6 | M | n | o | ñ |   |    |    |    |    |    |    |
| 7      | P   | Q | R | S | 7 | p | q | r | s |    |    |    |    |    |    |
| 8      | T   | U | V | 8 | T | u | v |   |   |    |    |    |    |    |    |
| 9      | W   | X | Y | Z | 9 | w | x | y | z |    |    |    |    |    |    |
| 0      | 0   |   |   |   |   |   |   |   |   |    |    |    |    |    |    |

## Phones Supporting Japanese Character Bitmaps

The Mitel 52xx/53xx IP phones do not support Japanese characters. However, for all other phones supported by the system, the following chart shows which Japanese characters the user will enter depending on the number of times each dialpad button is pressed.

**Table 9.** *Custom Dialpad Characters — Japanese*

| Button | Number of Times Dialpad Button is Pressed |     |     |    |    |     |   |
|--------|---|-----|-----|----|----|-----|---|
|        | 1   | 2   | 3   | 4  | 5  | 6   | 7 |
| 1      | A   | I   | U   | E  | O  | a   | 1 |
| 2      | KA  | KI  | KU  | KE | KO | i   | 2 |
| 3      | SA  | SHI | SU  | SE | SO | u   | 3 |
| 4      | TA  | CHI | TSU | TE | TO | e   | 4 |
| 5      | NA  | NI  | NU  | NE | NO | o   | 5 |
| 6      | HA  | HI  | FU  | HE | HO | tsu | 6 |
| 7      | MA  | MI  | MU  | ME | MO | ya  | 7 |
| 8      | YA  | YU  | YO  | yu | 8  |     |   |
| 9      | RA  | RI  | RU  | RE | RO | yo  | 9 |
| 0      | WA  | WO  | N   | pa | ba | lg  | 0 |

## Single-Node and Network (Multi-Node) Configurations

Your system may be a stand-alone system (single node) or it may be connected to more than one node as a network (multi-node). In some cases, you can use the administrator phone to configure network node features. See “System Networks and Nodes” on [page 3](#) for more information.

### System Day and Night Modes

Day or Night Mode determines a system trunk access, toll restriction, emergency outgoing access, and related features for all phones on a node. Active calls are not affected when you switch to Day or Night Mode.

### Setting a Single-Node System in Day or Night Mode

You can set the local node in Day or Night Mode.

**To set the Day or Night Mode status for a single-node:**

Dial **9860**. NIGHT MODE IS ON (or OFF) appears followed by THE SYSTEM IS IN NIGHT MODE, if the system is in Night Mode. If the system is in Day Mode, the display returns to the idle state.

### Selecting Nodes for Day or Night Mode

You can select system nodes for Day or Night Mode.

**To turn on Night Mode for a specific node:**

1. Dial **9861**. ENABLE NIGHT MODE ON NODE appears.
2. Enter the node number (**01–99**), or enter **00** to select all nodes (00 can also be used for a single-node configuration). ENABLED NETWORK NIGHT MODE appears followed by THE SYSTEM (or NODE <number>) IS IN NIGHT MODE.

**To turn on Day Mode for a specific node:**

1. Dial **9862**. ENABLE DAY MODE ON NODE appears.
2. When prompted, enter the node number (**01–99**). To select all nodes or for a single-node configuration, enter **00**. ENABLED NETWORK DAY MODE appears. The display then returns to the idle state.



## System Date and Time

You can reset the system time or date when it is necessary, for example, when the system is defaulted or for daylight-savings time. The date and time are shown on all display phones and Station Message Detail Recording (SMDR) reports, which record call activity data.

If enabled in DB Programming, the 5000 CP supports Automatic Daylight Savings Time (British Summer Time, in Europe). If Network Time Protocol (NTP) is enabled for your system, the network date and time automatically synchronize daily at 12:15 A.M. with an identified atomic clock. Contact your system administrator for more information.

### Setting the System Date and Time

You can change the date and time for an individual node or the entire network.

#### To set the system date and time:

##### NOTES

At any time, you can press \* to return to the previous menu, or press the Speaker button to exit programming and cancel any unsaved changes.

For the Japanese language (which is not supported on the 5xxx phones, enter the date as year, month, day. For example, **080203** for February 3, 2008. Also, time prompts are reversed, and you set AM or PM before the hour and minutes.

1. Dial **9800** (single node) or **9810** (multi-node). The programmed date appears.  
If you do not need to change the date, press # or the **ACCEPT** menu button to skip to the TIME <programmed time> prompt, and then go to step 3.
2. Use the dialpad buttons to enter the month, day, and year. For example, enter **020308** for February 3, 2008. The day of the week is automatically calculated and set by the system when the date is entered. When finished, the displays shows the current time. If you entered the date incorrectly, INVALID DATE appears, and you are prompted to enter a new date.  
If you do not need to change the time, press # or the **ACCEPT** menu button twice to exit. SYSTEM DATE AND TIME UPDATED appears.
3. Use the dialpad buttons to enter the time in hours and minutes. For example, enter **0900** for 9:00. If you entered the time incorrectly, INVALID TIME appears and you are prompted to enter a new time.
4. If the system is set for 12-hour display format, SELECT AM OR PM (AM=1 PM=2) appears. Press **1** (or the **AM** menu button) for A.M. or press **2** (or the **PM** menu button) for P.M. SYSTEM DATE AND TIME UPDATED appears. (If you press any button other than 1 or 2, INVALID TIME appears, and you are prompted to enter a new time.)

### Synchronizing Network Times

You can synchronize the minutes past the hour across a network configuration without changing the hour. This is useful when nodes are in different time zones. If a node time is off by more than 30 minutes, synchronizing the minutes may cause the hour to change. Also, network time is automatically synchronized every day at 12:30 A.M. (00:30), using the time setting on the lowest node number.

##### NOTE

If enabled, an NTP synchronization overrides the 5000 CP synchronization on any node that has NTP enabled (see “System Date and Time” above). Contact your system administrator for more information.

#### To synchronize the clocks in all nodes in the network:

Dial **9811**. NETWORK TIME SYNCHRONIZED appears.

## System Speed Dial

You can program System Speed Dial numbers. Any system user can then use the System Speed Dial feature to dial the programmed numbers. (With v3.2 or later software, you can create system speed dial entries in a CSV file and import/export the entries to/from DB Programming. See your system administrator for details.)

System Speed Dial numbers can include hookflashes or pauses for dialing a series of numbers. For example, a Speed Dial number can contain a pause, an access code, and a phone number.

### To program or change System Speed Dial numbers and names:

**NOTE**

At any time, you can press \* to return to the previous menu, or press the Speaker button to exit the programming session and cancel any unsaved changes.

1. Dial **9801**. PROGRAM SYS SPD # (**000-999** or **0000-4999**) appears.
2. Enter the Speed Dial location code (**000-999** or **0000-4999**). ENTER NAME <current name> appears.
3. Do one of the following:
  - Enter the name (or leave the existing name).
  - Press the **CLEAR** menu button or the backspace button (see [page 7](#)) repeatedly to erase the current name and leave it blank.
4. Press # or the **ACCEPT** menu button. ENTER NUMBER appears.
5. Enter the number, up to 48 digits, using one of the following methods:
  - Press the **REDIAL** menu button to enter the last *external* number dialed or saved.
  - Use the dialpad to manually enter the number. If you make a mistake, you can press the backspace button (see [page 7](#)) to move the cursor backward and delete the last characters entered.

**NOTES**

You can press the Special button (see [page 7](#)) once for an asterisk (\*), twice for a pound (#), three times for a hookflash (F), or four times for a pause (P).

To use Private Branch Exchange (PBX) trunks in Speed Dial numbers, enter the other system trunk access codes followed by a pause. The lengths of the hookflash and the pause are determined by the programmable Central Office (CO) Hookflash and Pause Digit timers.

6. Press # or the **ACCEPT** menu button to save the number. You hear a single progress tone when the number is accepted. SYS SPD BIN # <number> UPDATED appears.

### To delete System Speed Dial names or numbers:

1. Dial **9801**. PROGRAM SYS SPD # (**000-999** or **0000-4999**) appears.
2. Enter the Speed Dial location code (**000-999** or **0000-4999**). ENTER NAME <current name> appears.
3. Press the **CLEAR** menu button or the backspace button (see [page 7](#)) repeatedly until the name is deleted, and then press # or the **ACCEPT** menu button. ENTER NUMBER appears.
4. Press the backspace button (see [page 7](#)) repeatedly until the number is deleted.
5. Press # or the **ACCEPT** menu button to exit. SYS SPD BIN # <number> UPDATED appears.

## Configuration Assistant

The Configuration Assistant, which was first introduced in v4.0, is a voice guided configuration portal that provides easy-to-use, remote access to the following end-user phone configuration options:

- Dynamic Extension Express (previously known as Personal Call Routing)
- Do-Not-Disturb (DND)
- Call Forwarding
- Meet-Me Conferencing (added in v5.0)
- Administrator Functions

---

**NOTE**

Although the original Remote Programming feature is still available, Configuration Assistant is easier to access and use.

When a call is placed to Configuration Assistant, the caller is prompted for a station extension number and passcode (i.e., the Remote Programming numeric passcode assigned to the extension). Once the station extension number and passcode are authenticated, the caller is presented with the options listed above.

The administrator functions option, which is presented only if the authenticated extension is identified as a designated administrator, allows the caller to change the system's night ring status. (There are currently no other administrator functions available in the current software release.) When this option is selected, Configuration first states whether night ring is enabled or not (e.g., "Night ring is enabled") and then offers the following administrator functions:

- Enable night ring (only if night ring is currently disabled)
- Disable night ring (only if night ring is currently enabled)

Refer to the latest phone user guide for your particular model of phone for complete instructions on accessing Configuration Assistant and following the voice prompts to perform the desired configuration options.

## Station (Phone) Programming Options

**NOTE**

Because the following programming changes are saved in the system database, you cannot make changes if the 5000 CP DB Programming application is open. If you try to make changes, DATABASE IN USE BY OTHER APPLICATIONS appears. The application must be closed before you can use the administrator phone to make changes. Contact your system administrator for more information.

The following sections describe station (phone) options that you can program with the administrator phone:

- [Enabling or Disabling Other Phones as Administrator Phones](#) below
- Enabling or Disabling Attendant Phones on [page 17](#)
- Programming Extension User Names on [page 18](#)
- Programming Phone Toll Restrictions on [page 19](#)

See Figure 1 on [page 22](#) for the Database Option flowchart.

### Enabling or Disabling Other Phones as Administrator Phones

You can enable or disable other phones as additional administrator phones. However, you cannot use the administrator phone to disable itself.

**To enable or disable administrator phones:**

**NOTE**

At any time, you can press \* to return to the previous menu, or press the Speaker button to exit the programming session and cancel any unsaved changes.

1. Dial **9932** (**9132** in Europe). If a passcode is required (see [page 23](#)), ENTER PASSCODE appears (otherwise, go to [step 3](#)).
2. Enter the passcode, and then press **#**. ENTER DATABASE OPTION (1 - 3) appears.
3. Press **1** or the **STATION** menu button. ENTER STATION EXTENSION appears.
4. Enter the extension number, or enter a partial extension number, and then press **#** or the **ACCEPT** menu button. The extension information that best matches the partial number appears. You can use the Volume buttons or the **NEXT** and **PREVIOUS** menu buttons to scroll through entries.
5. Press **#** or the **ACCEPT** menu button to accept the entry.
6. Press **1** or the **STATION FLAGS** menu button. ADMINISTRATOR (ON = 1 OFF = 2) appears.
7. Press **1** or the **ON** menu button to enable the phone as an administrator phone, or press **2** or the **OFF** menu button to disable the phone as an administrator phone.
8. Press **#** or the **ACCEPT** menu button. DATABASE UPDATED appears.
9. When you are finished with all programming, press the Speaker button or **#** repeatedly to exit the programming session.

## Enabling or Disabling Attendant Phones

You can enable or disable other phones as Attendant phones. Attendant phones can be called by dialing 0 at the phones they serve. Usually, they are also programmed to provide these services:

- Central operators for incoming calls
- Message centers
- Recall phones for unanswered calls

### To enable or disable Attendant phones:

**NOTE**

At any time, you can press \* to return to the previous menu, or press the Speaker button to exit the programming session and cancel any unsaved changes.

1. Dial **9932** (**9132** in Europe). If a passcode is required (see [page 23](#)), ENTER PASSCODE appears (otherwise, go to [step 3](#)).
2. Enter the passcode, and then press #. ENTER DATABASE OPTION (1 - 3) appears.
3. Press **1** or the **STATION** menu button. ENTER STATION EXTENSION appears.
4. Enter the extension number, or enter a partial extension number, and then press # or the **ACCEPT** menu button. The extension information that best matches the partial number appears. You can use the Volume buttons or the **NEXT** and **PREVIOUS** menu buttons to scroll through entries.
5. Press # or the **ACCEPT** menu button to accept the entry.
6. Press **2** or the **STATION INFO** menu button. ENTER STN INFO OPTION (1-2) appears.
7. Press **1** or the **ATTENDANT** menu button. ENTER ATTENDANT EXTENSION appears.

**NOTE**

If NO ATTENDANTS PROGRAMMED appears, attendants must be programmed in DB Programming before you can assign other stations as attendants. If applicable, contact your system administrator for assistance.

8. Enter the extension of the phone to be assigned as an Attendant. When the display shows the circuit information, press # again to return to the ENTER STATION INFO OPTION prompt. If necessary, repeat steps [7](#) and [8](#) for additional Attendant phones.
9. When you are finished with all programming, press the Speaker button or # repeatedly to exit the programming session.

## Programming Extension User Names

You can assign user names (the name shown on the display) to other system phones. You can also change existing user names.

### To program user names:

**NOTE**

At any time, you can press \* to return to the previous menu, or press the Speaker button to exit the programming session and cancel any unsaved changes.

1. Dial **9932** (**9132** in Europe). If a passcode is required (see [page 23](#)), ENTER PASSCODE appears (otherwise, go to [step 3](#)).
2. Enter the passcode, and then press **#**. ENTER DATABASE OPTION (1 - 3) appears.
3. Press **1** or the **STATION** menu button. ENTER STATION EXTENSION appears.
4. Enter the extension number, or enter a partial extension number, and then press **#** or the **ACCEPT** menu button. The extension information that best matches the partial number appears. You can use the Volume buttons or the **NEXT** and **PREVIOUS** menu buttons to scroll through entries.
5. Press **#** or the **ACCEPT** menu button to accept the entry. ENTER STATION OPTION (1 - 3) appears.
6. Press **2** or the **STATION INFO** menu button. ENTER STATION INFO OPTION (1 - 2) appears.
7. Press **2** or the **USERNAME** menu button. ENTER USERNAME appears.
8. Enter the user name (up to 10 characters) using the dialpad buttons. See “Supported Languages and Dialpad Character Descriptions” on [page 7](#) for dialpad character descriptions.
9. Press **#** or the **ACCEPT** menu button. DATABASE UPDATED appears.
10. When you are finished with all programming, press the Speaker button or **#** repeatedly to exit the programming session.

## Programming Phone Toll Restrictions

You can program toll restriction classes of service (COS) for specific system phones. A COS restricts or allows certain digit patterns when external phone numbers are dialed. COS options are programmed individually for phones, voice processing system applications, and trunk groups. Separate COS designations are available for Day and Night Modes. A phone or trunk group can have a combination of COS restrictions. See [page 21](#) for instructions.

**NOTES**

System Speed Dial numbers can be programmed to bypass COS restrictions on a system-wide basis. If the option is not enabled, all System Speed Dial numbers are subject to toll restriction.

Because conditions may exist when critical or life-threatening situations need to be reported, the Emergency Call access code (911 U.S. or 999/112 Europe) overrides all toll restrictions and trunk access programming.

[Table 10](#) below and [Table 11](#) on [page 20](#) describe default U.S. and European COS values.

**Table 10.** Default U.S. Class of Service Values

| COS   | Name                 | Restriction  |
|---|----------------------|--|
| 01  | ARS Only             | <i>This is a phone class of service only. It is not used for trunk groups. Also, the Automatic Route Selection (ARS) feature, which is standard on the 5000 CP, is required. Calls can only be placed using the ARS feature. The user hears reorder tones when attempting to place a call using any other method. A restricted user can still select individual trunks if the trunks are designated as "exempt from ARS Only," or if they were transferred, were placed on hold, or are recalling or ringing. Trunk restriction determines which trunks in the ARS route group can be selected by the phone or application.</i>  |
| 02  | Deny Area/<br>Office | This restriction is divided into eight user groups to allow the use of varying area/office code restriction tables. This is useful for reducing restrictions for some of the phones, applications, or trunk groups while increasing restrictions for others. Each phone, application, and trunk group is assigned a day mode and a night mode user group in DB Programming. Within each user group, area codes can be designated as restricted, allowed, or extended. Restricting an area code prevents users from placing calls to that area code. Allowing an area code allows all office codes within that area code. Designating an area code as extended allows the programmer to determine which office codes (up to 800) are allowed or restricted within that area code. |
| 03  | Deny Operator        | Calls to operator numbers are restricted.  |
| 04  | Deny Toll Access     | Calls to numbers containing a toll string (defaults to 1) are restricted.  |
| 05  | Deny International   | Calls to international numbers are restricted.   |
| 06  | Deny Equal Access    | Calls that begin with equal access digits (10XXX or 101XXXX) are restricted.   |
| 07  | Deny Local Calls     | Calls to local numbers are restricted.   |
| 08  | Denied Numbers       | Calls to programmed "denied" numbers (defaults to 1900NXXXXXX+ and 976XXXX+) are restricted.   |
| 09  | Allowed Numbers      | Calls to programmed "allowed" numbers (defaults to 1800NXXXXXX+) are allowed, even if number also matches a dial pattern in a restricted class of service that is assigned to the phone, application, or trunk group being used.   |
| COS designations 01 to 09 have default values. COS designations (10 to 16) do not have default values and are blank. All COSs are programmable. Each may be specified as an "allowed" or "denied" class of service, dialing patterns can be programmed for each, and each can be assigned to phones and trunk groups as needed. |                      |  |

**Phone and System Administration**  
**Programming Phone Toll Restrictions**

**Table 11.** *Default European Class of Service Values*

| <b>COS</b>   | <b>Name</b>        | <b>Restriction</b>  |
|--|--------------------|---|
| 01   | ARS Only           | <i>This is a phone class of service only. It is not used for trunk groups. Also, the Automatic Route Selection (ARS) feature, which is standard on the 5000 CP, is required. Calls can only be placed using the ARS feature. The user hears reorder tones when attempting to place a call using any other method. A restricted user can still select individual trunks if the trunks are designated as "exempt from ARS Only," or if they were transferred, were placed on hold, or are recalling or ringing. Trunk restriction determines which trunks in the ARS route group can be selected by the phone or application.</i> |
| 02   | Deny Operator      | Calls to operator numbers are restricted.   |
| 03   | Deny Toll Access   | Calls to numbers containing a toll string (TN+, TE, 010+, and T1+) are restricted.  |
| 04   | Deny International | Calls to international numbers (I+) are restricted.   |
| 05   | Deny Local Calls   | Calls to local numbers (N+) are restricted.   |
| 06   | Denied Numbers     | Calls to programmed "denied" numbers (0891+ and 0898+) are restricted.  |
| 07   | Allowed Numbers    | Calls to programmed "allowed" numbers (0345+, 0500+, 0645+, and 0800+) are allowed, even if number also matches a dial pattern in a restricted class of service that is assigned to the phone, application, or trunk group being used.  |
| <p>Calls are restricted only if the dialed patterns match the denied pattern exactly. COS designations 01–07 have default values. COS designations 10–16 do not have default values and are blank. All of the classes of service are programmable. Each may be specified as an "allowed" or "denied" class of service, dialing patterns can be programmed for each, and each can be assigned to phones and trunk groups as needed.</p> |                    |   |




**To program toll restrictions for specific phones:**

**NOTE**

At any time, you can press \* to return to the previous menu, or press the Speaker button to exit the programming session and cancel any unsaved changes.

1. Dial **9932** (**9132** in Europe). If a passcode is required (see [page 23](#)), ENTER PASSCODE appears (otherwise, go to [step 3](#)).
2. Enter the passcode, and then press **#**. ENTER DATABASE OPTION (1 - 3) appears.
3. Press **1** or the **STATION** menu button. ENTER STATION EXTENSION appears.
4. Enter the extension number, or enter a partial extension number, and then press **#** or the **ACCEPT** menu button. The extension information that best matches the partial number appears. You can use the Volume buttons or the **NEXT** and **PREVIOUS** menu buttons to scroll through entries.
5. Press **#** or the **ACCEPT** menu button to accept the entry. ENTER STATION OPTION (1 - 3) appears.
6. Press **3** or the **TOLL RESTRICTION** menu button. TOLL RESTRICTION OPTION (1 - 2) appears.
7. Do one of the following:
  - Press **1** or the **COS DAY** menu button for day mode.
  - Press **2** or the **COS NIGHT** menu button for night mode.SET DAY (or NIGHT) COS XX appears. If this is not the COS you want to program, use the Volume buttons or the **NEXT** and **PREVIOUS** menu buttons to scroll to through the options. See Table 10 on [page 19](#) (U.S.) or Table 11 on [page 20](#) (Europe) for COS descriptions.
8. When the display shows the correct COS, press **1** or the **ON** menu button to enable the toll restriction, or press **2** or the **OFF** menu button to disable it.
9. Press **#** or the **ACCEPT** menu button to save the COS programming. DATABASE UPDATED appears followed by the TOLL RESTRICTION OPTION menu.
10. Repeat steps **6** through **8** as necessary to program additional toll restrictions.
11. When you are finished with all programming, press the Speaker button or **#** repeatedly to exit the programming session.

Figure 1. Station Programming Flowchart

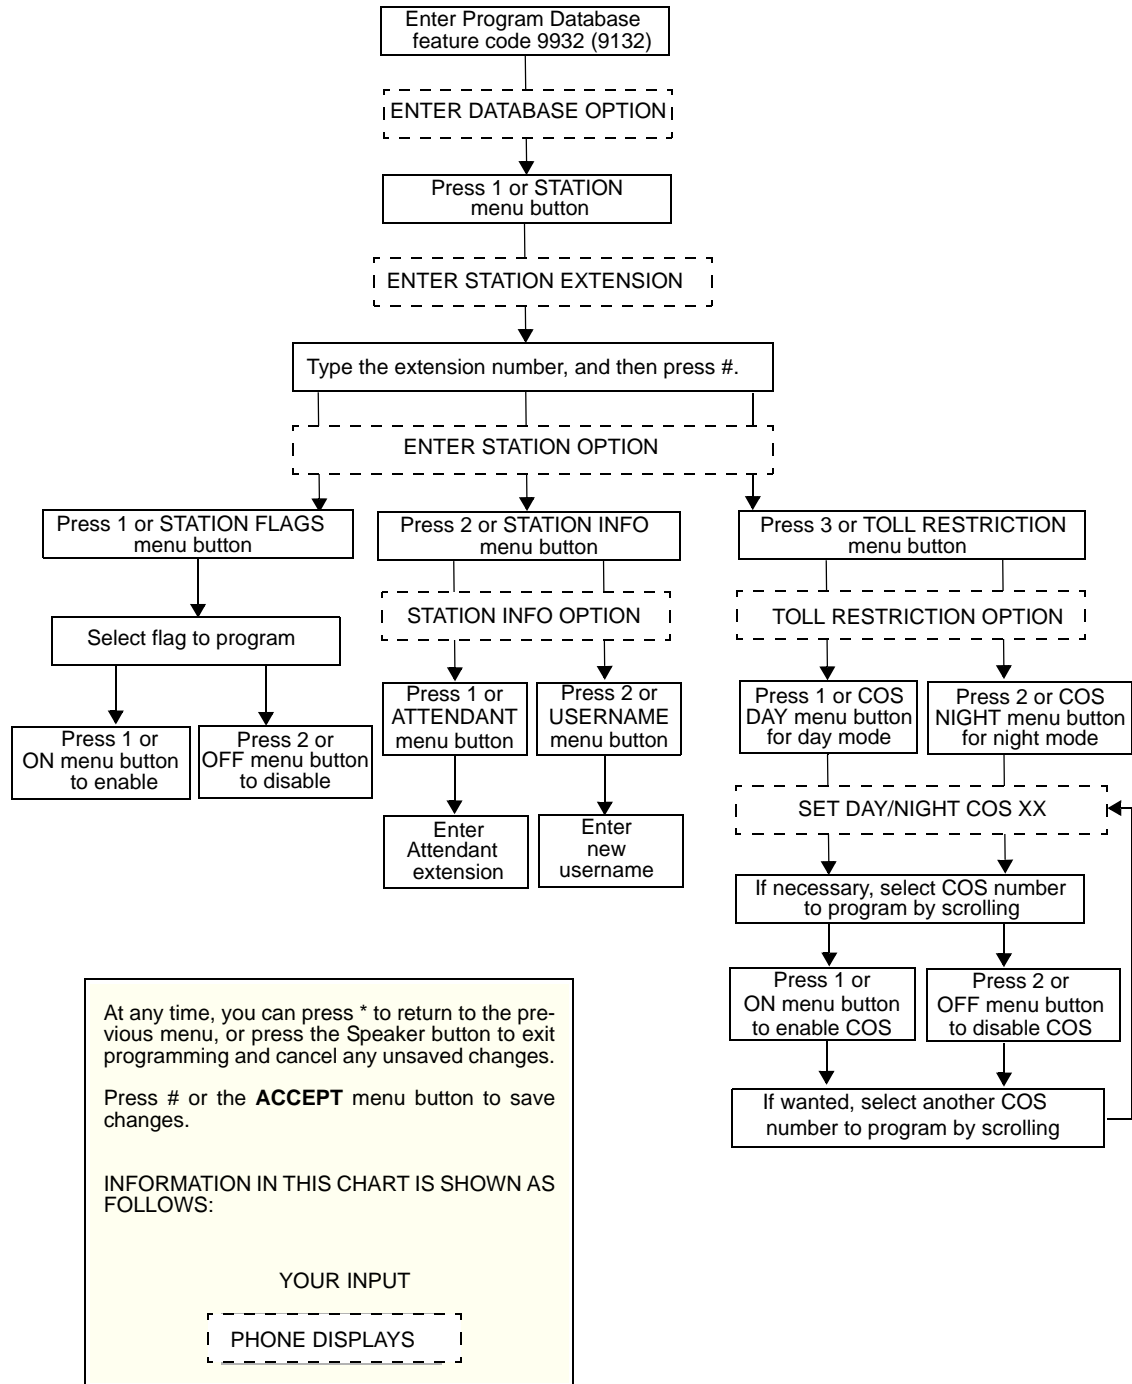

## System Programming Options

The following sections describe system options that you can program with the administrator phone:

- [Entering an Administrator Phone Passcode](#) below
- Changing Do-Not-Disturb (DND) Messages on [page 24](#)
- Changing Default Reminder Messages on [page 25](#)
- Changing Phone Extension Numbers on [page 26](#)
- Swapping Phone Extension Numbers on [page 27](#)

See Figure 2 on [page 28](#) for the System Database flowchart.

### Entering an Administrator Phone Passcode

Because several of the features described in this guide are accessed and configured in the system database, you should use a passcode to prevent unauthorized access.

You cannot use your administrator phone to assign passcodes to other administrator phones. Passcodes must be assigned at the administrator phone where the passcode is used.

#### To enter an administrator phone passcode:

---

**NOTE**

At any time, you can press \* to return to the previous menu, or press the Speaker button to exit the programming session and cancel any unsaved changes.

1. Dial **9932** (**9132** in Europe).
2. Press **2** or the **SYSTEM** menu button. ENTER SYSTEM OPTION (1 - 4) appears.
3. Press **2** or the **PASSCODE** menu button. CHANGE PASSCODE TO appears.
4. Do one of the following:
  - Enter a passcode (1 to 8 digits), and then press **#**.
  - Press **#** to erase the passcode and leave it blank.VERIFY PASSCODE appears.
5. Enter the passcode exactly as you did in [step 4](#) above followed by **#**. DATABASE UPDATED appears followed by the ENTER SYSTEM OPTION (1 - 4) menu. If you hear reorder/fast-busy tones and see an error message, the passcodes did not match and you must start over at the CHANGE PASSCODE prompt.
6. When you are finished with all programming, press the Speaker button or **#** repeatedly to exit the programming session.

## Changing Do-Not-Disturb (DND) Messages

You can delete or change the default DND messages. A phone in DND halts all pages, incoming intercom calls, camped-on calls, and transferred calls to that phone. Queue callbacks, recalls, and direct ring-in calls are not blocked. Another user calling the phone while it is in DND hears a repeating signal of four fast tones and a pause. Display phones show the DND message. The caller cannot camp on, but can queue or leave a station message at the phone.

In a network, each node has a list of DND messages that can be used only on that node. For reference, you can view default DND messages and record new messages in Table 15 on [page 54](#). Refer to the appropriate phone user guide for more information about using DND Messages.

### NOTES

When using primary and secondary languages, the system has default DND messages in both languages. When changing DND messages, you should keep the meanings for the messages in both lists the same. For example, if you change the primary language DND message “02” to “PAGE ME,” program a similar message for message “02” in the secondary language.

You must use a Mitel 8660/8662 six-line display phone to reprogram messages that use Katakana (Japanese) characters. The Japanese language is not supported on the 5000-series phones.

### To program DND messages:

#### NOTE

At any time, you can press \* to return to the previous menu, or press the Speaker button to exit the programming session and cancel any unsaved changes.

1. Dial **9932** (**9132** in Europe). If a passcode is required (see [page 23](#)), ENTER PASSCODE appears (otherwise, go to [step 3](#)).
2. Enter the passcode, and then press #. ENTER DATABASE OPTION (1 - 3) appears.
3. Press **2** or the **SYSTEM** menu button. ENTER SYSTEM OPTION (1 - 4) appears.
4. Press **1** or the **DND MESSAGES** menu button. SELECT DND MESSAGE # (01 - 20) appears.
5. Do one of the following:
  - Enter a message number, and then press #.
  - Press the **SCROLL** menu button, and then use the Volume buttons or the **NEXT** and **PREVIOUS** menu buttons to scroll through the options.
6. When the display shows the message that you want to change, enter the 1- to 16-character new message (you do not have to select the message). See “Supported Languages and Dialpad Character Descriptions” on [page 7](#) for dialpad character descriptions.
7. Press # or the **ACCEPT** menu button. <Message> SCROLL OR EDIT appears.
8. Press # or the **ACCEPT** menu button again. SELECT DND MESSAGE # (01 - 20) appears. To program another message, scroll to the message you want and repeat steps [6](#) and [7](#). After programming all messages, press # while the display shows SELECT DND MESSAGE # (01 - 20). DATABASE UPDATED appears followed by ENTER SYSTEM OPTION (1 - 4).

#### NOTE

You must return to the ENTER SYSTEM OPTION (1 - 4) menu to save DND message changes.

9. When you are finished with all programming, press the Speaker button or # repeatedly to exit the programming session.

## Changing Default Reminder Messages

You can delete or change the default Reminder Messages. Reminder messages are set to signal a phone at a specified time. The user can select one of 20 different messages and set the reminder time up to 24 hours in advance.

In a network, each node has a list of Reminder Messages that can be used only on that node. For reference, you can view default Reminder Messages or record new messages in the table on Table 16 on [page 55](#). Refer to the appropriate phone user guide for more information about using Reminder Messages.

### NOTES

When using primary and secondary languages, the system has default Reminder messages in both languages. When changing Reminder messages, you should keep the meanings for the messages in both lists the same. For example, if you change the primary language DND message "02" to "Go to Airport," program a similar message for message "02" in the secondary language.

You must use a Mitel 8660/8662 six-line display phone to reprogram messages that use Katakana (Japanese) characters. The Japanese language is not supported on the 5000-series phones.

### To change default Reminder Messages:

#### NOTE

At any time, you can press \* to return to the previous menu, or press the Speaker button to exit the programming session and cancel any unsaved changes.

1. Dial **9932** (**9132** in Europe). If a passcode is required (see [page 23](#)), ENTER PASSCODE appears (otherwise, go to [step 3](#)).
2. Enter the passcode, and then press **#**. ENTER DATABASE OPTION (1 - 3) appears.
3. Press **2** or the **SYSTEM** menu button. ENTER SYSTEM OPTION (1 - 4) appears.
4. Press **3** or the **REMINDER MSGS** menu button. SELECT REMINDER MSG # (1 - 20) appears.
5. Do one of the following:
  - Enter a message number, and then press **#**.
  - Press the **SCROLL** menu button, and then use the Volume buttons or the **NEXT** and **PREVIOUS** menu buttons to scroll through the options.
6. When the display shows the message that you want to change, enter the 1- to 16-character new message (you do not have to select the message). See "Supported Languages and Dialpad Character Descriptions" on [page 7](#) for dialpad character descriptions.
7. Press **#** or the **ACCEPT** menu button. <Message> SCROLL OR EDIT appears.
8. Press **#** or the **ACCEPT** menu button again. SELECT REMINDER MESSAGE # (01 - 20) appears. To program another message, scroll to the message you want and repeat steps [6](#) and [7](#). After programming all messages, press **#** while the display shows SELECT REMINDER MESSAGE # (01 - 20). DATABASE UPDATED appears followed by ENTER SYSTEM OPTION (1 - 4).

#### NOTE

You must return to the ENTER SYSTEM OPTION (1 - 4) menu to save Reminder Message changes.

9. When you are finished with all programming, press the Speaker button or **#** repeatedly to exit the programming session.

## Changing Phone Extension Numbers

You can change the extension number for any system phone. The new extension number cannot be the same as an existing number.

### To change a phone extension number:

**NOTE** At any time, you can press \* to return to the previous menu, or press the Speaker button to exit the programming session and cancel any unsaved changes.

1. Dial **9932** (**9132** in Europe). If a passcode is required (see [page 23](#)), ENTER PASSCODE appears (otherwise, go to [step 3](#)).
2. Enter the passcode, and then press #. ENTER DATABASE OPTION (1 - 3) appears.
3. Press **2** or the **SYSTEM** menu button. ENTER SYSTEM OPTION (1 - 4) appears.
4. Press **4** or the **STN EXTENSION** menu button. ENTER SYS STN OPTION (1 - 2) appears.
5. Press **1** or the **CHANGE EXT** menu button. ENTER STATION EXTENSION appears.
6. Enter the extension number, or enter a partial extension number, and then press # or the **ACCEPT** menu button. The extension information that best matches the partial number appears. You can use the Volume buttons or the **NEXT** and **PREVIOUS** menu buttons to scroll through entries.
7. Press # or the **ACCEPT** menu button to accept the entry.  
After you select an extension, CHANGE <extension> TO EXTENSION appears.
8. Enter the new extension number for the phone, and then press # or the **ACCEPT** menu button to accept the entry. UPDATING DATABASE appears for approximately four seconds followed by DATABASE UPDATED.

**NOTE** If you entered an extension number that is already assigned, CONFLICTING EXTENSION appears. After ENTER STATION EXTENSION appears, enter another extension number.

9. When you are finished with all programming, press the Speaker button or # repeatedly to exit the programming session.

## Swapping Phone Extension Numbers

A phone extension number can be reassigned to (swapped with) another phone. To swap extensions, the two affected phones must meet the following criteria:

- Both phones (and the administrator phone) must reside on the same node.
- Both phones must be the same type. For example, if you are swapping a Mitel 8662 ITP Mode phone extension number with another system extension number, the other extension number must be assigned to another ITP Mode Mitel 8662. This applies to all device types.
- Neither device can be the administrator phone performing the swap.
- Neither device can be in an active Hot Desk session.

### To swap phone extension numbers:

**NOTE** At any time, you can press \* to return to the previous menu, or press the Speaker button to exit the programming session and cancel any unsaved changes.


1. Dial **9932** (**9132** in Europe). If a passcode is required (see [page 23](#)), ENTER PASSCODE appears (otherwise, go to [step 3](#)).
2. Enter the passcode, and then press #. ENTER DATABASE OPTION (1 - 3) appears.
3. Press **2** or the **SYSTEM** menu button. ENTER SYSTEM OPTION (1 - 4) appears.
4. Press **4** or the **STN EXTENSION** menu button.
5. Press **2** or **SWAP EXTS**. ENTER STATION EXTENSION appears.
6. Enter the extension number, or enter a partial extension number, and then press # or the **ACCEPT** menu button. The extension information that best matches the partial number appears. You can use the Volume buttons or the **NEXT** and **PREVIOUS** menu buttons to scroll through entries.
7. Press # or the **ACCEPT** menu button to accept the entry. SWAP <extension> WITH EXTENSION appears.
8. Enter the *second* extension number to be swapped. DATABASE UPDATED appears.

**NOTE** CONFLICTING EXTENSION appears if the entered extension is the administrator phone performing the swap, the same extension number as the target phone, or the wrong device type.

9. After ENTER SYSTEM OPTION (1 - 4) appears, press # again to exit to the ENTER DATABASE OPTION menu.
10. When you are finished with all programming, press the Speaker button or # repeatedly to exit the programming session.

## Phone and System Administration Swapping Phone Extension Numbers

Figure 2. System Database Programming Flowchart

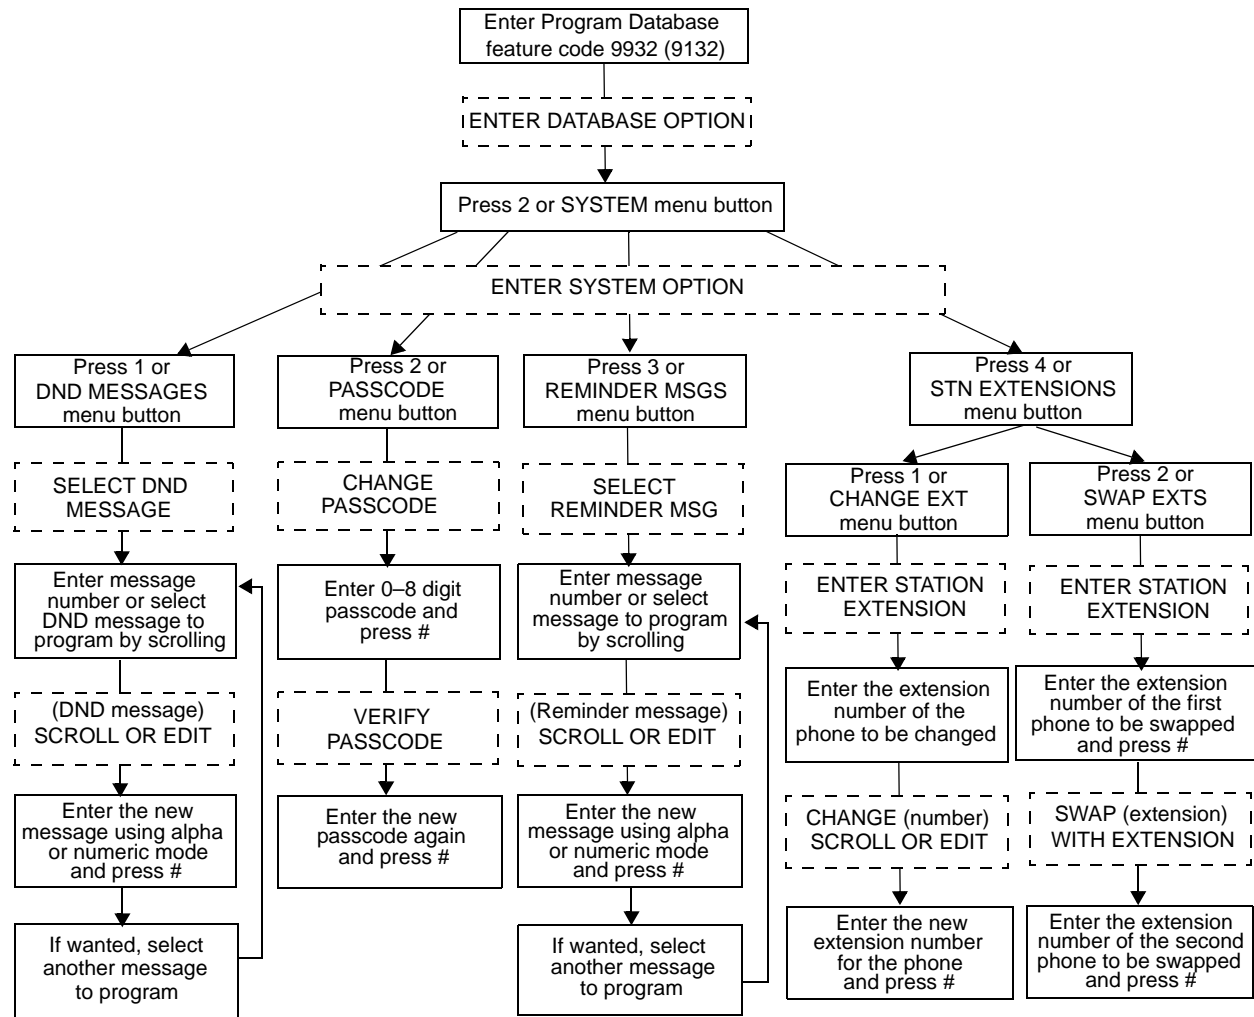

At any time, you can press \* to return to the previous menu, or press the Speaker button to exit programming and cancel any unsaved changes.

Press # or the **ACCEPT** menu button to save changes.

INFORMATION IN THIS CHART IS SHOWN AS FOLLOWS:

YOUR INPUT

PHONE DISPLAYS



## Individual Trunk Programming Options

You can program the following individual trunk options:

- [Programming the Trunk Answer Supervision Type](#) below
- Programming Caller ID on [page 31](#)
- Programming the Hybrid Balance Option on [page 32](#)
- Programming DTMF or Dial Pulse Signalling on [page 33](#)
- Programming Trunk Group Assignments on [page 34](#)
- Programming the Busy Trunk Option on [page 35](#)

See Figure 3 on [page 40](#) for the Trunk Database flowchart.

### Programming the Trunk Answer Supervision Type

Answer Supervision determines whether the system should consider a call valid when it receives polarity reversal from the CO, or wait for the Valid Call timer to expire. Any outside call put on hold becomes valid immediately, regardless of Answer Supervision or Valid Call timer status. There are three Answer Supervision Type options:

- **Polarity Reversal:** A loop reversal must be received to consider the call valid. When the first loop reversal is received, the call is made valid immediately, and the phone display shows the call cost. When a second loop reversal is received, the system terminates the call. If a second loop reversal is not received, the system does not terminate the call unless the inside party hangs up or loss-of-loop is received from the telephone company.
- **Valid Call Timer:** The call is validated after the Valid Call Timer expires. All polarity reversals received before and after the Valid Call Timer are ignored.
- **Valid Call Timer with Polarity Reversal:** If a loop reversal is received before the Valid Call Timer expires, the call will be made valid immediately, and the phone display shows call cost. When a second loop reversal is received, the system terminates the call. If a loop reversal is not received before the Valid Call Timer expires, the call is made valid by the timer. If a loop reversal is received after the timer expires, the loop reversal is ignored, but the call cost is reset. If a second loop reversal is then received, the system terminates the call. If a second loop reversal is not received, the system will not terminate the call unless the inside party hangs up or loss-of-loop is received from the telephone company.

See [page 30](#) for programming instructions.

To program the Answer Supervision Type:

**NOTE**

At any time, you can press \* to return to the previous menu, or press the Speaker button to exit the programming session and cancel any unsaved changes.

1. Dial **9932** (**9132** in Europe). If a passcode is required (see [page 23](#)), ENTER PASSCODE appears (otherwise, go to [step 3](#)).
2. Enter the passcode, and then press **#**. ENTER DATABASE OPTION (1 - 3) appears.
3. Press **3** or the **TRUNK** menu button. ENTER TRUNK OPTION appears.
4. Press **1** or the **INDIVIDUAL TRUNK** menu button. ENTER TRUNK EXTENSION appears.
5. Enter the extension number, or enter a partial extension number, and then press **#** or the **ACCEPT** menu button. The extension information that best matches the partial number appears. You can use the Volume buttons or the **NEXT** and **PREVIOUS** menu buttons to scroll through entries.
6. Press **#** or the **ACCEPT** menu button to accept the entry.
7. Press **1** or the **ANS SUPERVISION** menu button. ANS SUPERVISION OPTION (1 - 3) appears.
8. Select one of the following:
  - Press **1** or the **POLARITY-REVERSE** menu button for the polarity-reversal supervision type.
  - Press **2** or the **VALID CALL** menu button for Valid Call timer supervision.
  - Press **3** or the **VALID + POLARITY** menu button for Valid Call timer with Polarity Reversal supervision.
9. Press **#** or the **ACCEPT** menu button to accept the entry. DATABASE UPDATED appears.
10. When you are finished with all programming, press the Speaker button or # repeatedly to exit the programming session.

## Programming Caller ID

You can enable or disable incoming and outgoing Caller ID for individual trunks.

### To program Caller ID for an individual trunk:

**NOTE**

At any time, you can press \* to return to the previous menu, or press the Speaker button to exit the programming session and cancel any unsaved changes.

1. Dial **9932** (**9132** in Europe). If a passcode is required (see [page 23](#)), ENTER PASSCODE appears (otherwise, go to [step 3](#)).
2. Enter the passcode, and then press #. ENTER DATABASE OPTION (1 - 3) appears.
3. Press **3** or the **TRUNK** menu button. ENTER TRUNK OPTION appears.
4. Press **1** or the **INDIVIDUAL TRUNK** menu button. ENTER TRUNK EXTENSION appears.
5. Enter the extension number, or enter a partial extension number, and then press # or the **ACCEPT** menu button. The extension information that best matches the partial number appears. You can use the Volume buttons or the **NEXT** and **PREVIOUS** menu buttons to scroll through entries.
6. Press # or the **ACCEPT** menu button to accept the entry.
7. Press **2** or the **CALLER ID** menu button. SET CALLER ID (ON = 1 OFF = 2) appears.
8. Press **1** or the **ON** menu button to enable CALLER ID, or press **2** or the **OFF** menu button to disable it.
9. Press # or the **ACCEPT** menu button to accept the entry. DATABASE UPDATED appears.
10. When you are finished with all programming, press the Speaker button or # repeatedly to exit the programming session.

## Programming the Hybrid Balance Option

A field technician runs a Hybrid Balance Test to ensure that analog trunks connected to the 5000 CP have the best hybrid balance settings. You can change the hybrid balance setting for individual trunks.

### To program the Hybrid Balance Option:

**NOTE**

At any time, you can press \* to return to the previous menu, or press the Speaker button to exit the programming session and cancel any unsaved changes.

1. Dial **9932** (**9132** in Europe). If a passcode is required (see [page 23](#)), ENTER PASSCODE appears (otherwise, go to [step 3](#)).
2. Enter the passcode, and then press **#**. ENTER DATABASE OPTION (1 - 3) appears.
3. Press **3** or the **TRUNK** menu button. ENTER TRUNK OPTION appears.
4. Press **1** or the **INDIVIDUAL TRUNK** menu button. ENTER TRUNK EXTENSION appears.
5. Enter the extension number, or enter a partial extension number, and then press **#** or the **ACCEPT** menu button. The extension information that best matches the partial number appears. You can use the Volume buttons or the **NEXT** and **PREVIOUS** menu buttons to scroll through entries.
6. Press **#** or the **ACCEPT** menu button to accept the entry.
7. Press **3** or the **HYBRID BALANCE** menu button. HYBRID BALANCE OPTION (0 - 7) appears.
8. Enter the Hybrid Balance option (**0** to **7**), or use the Volume buttons or the **NEXT** and **PREVIOUS** menu buttons to scroll through entries.
9. Press **#** or the **ACCEPT** menu button to accept the entry. DATABASE UPDATED appears.
10. When you are finished with all programming, press the Speaker button or # repeatedly to exit the programming session.

## Programming DTMF or Dial Pulse Signalling

You can program trunks for dual tone multi-frequency (DTMF) or dial pulse signalling.

### To program DTMF or dial pulse signalling:

**NOTE**

At any time, you can press \* to return to the previous menu, or press the Speaker button to exit the programming session and cancel any unsaved changes.

1. Dial **9932** (**9132** in Europe). If a passcode is required (see [page 23](#)), ENTER PASSCODE appears (otherwise, go to [step 3](#)).
2. Enter the passcode, and then press #. ENTER DATABASE OPTION (1 - 3) appears.
3. Press **3** or the **TRUNK** menu button. ENTER TRUNK OPTION appears.
4. Press **1** or the **INDIVIDUAL TRUNK** menu button. ENTER TRUNK EXTENSION appears.
5. Enter the extension number, or enter a partial extension number, and then press # or the **ACCEPT** menu button. The extension information that best matches the partial number appears. You can use the Volume buttons or the **NEXT** and **PREVIOUS** menu buttons to scroll through entries.
6. Press # or the **ACCEPT** menu button to accept the entry.
7. Press **4** or the **SIGNALLING** menu button. ENTER SIGNALLING OPTION (1 - 2) appears.
8. Press **1** or the **DTMF** menu button, or press **2** or the **PULSE** menu button.
9. Press # or the **ACCEPT** menu button to accept the entry. DATABASE UPDATED appears.
10. When you are finished with all programming, press the Speaker button or # repeatedly to exit the programming session.

## Programming Trunk Group Assignments

Each trunk must be assigned to a trunk group. You change the trunk group assignment for an individual trunk.

### To assign a trunk to a different trunk group:

**NOTE**

At any time, you can press \* to return to the previous menu, or press the Speaker button to exit the programming session and cancel any unsaved changes.

1. Dial **9932** (**9132** in Europe). If a passcode is required (see [page 23](#)), ENTER PASSCODE appears (otherwise, go to [step 3](#)).
2. Enter the passcode, and then press #. ENTER DATABASE OPTION (1 - 3) appears.
3. Press **3** or the **TRUNK** menu button. ENTER TRUNK OPTION appears.
4. Press **1** or the **INDIVIDUAL TRUNK** menu button. ENTER TRUNK EXTENSION appears.
5. Enter the extension number, or enter a partial extension number, and then press # or the **ACCEPT** menu button. The extension information that best matches the partial number appears. You can use the Volume buttons or the **NEXT** and **PREVIOUS** menu buttons to scroll through entries.
6. Press # or the **ACCEPT** menu button to accept the entry.
7. Press **5** or the **TRUNK GROUP** menu button. ENTER TRUNK GRP EXTENSION appears.
8. Enter the trunk group number, or use the Volume buttons or the **NEXT** and **PREVIOUS** menu buttons to scroll through entries.
9. Press # or the **ACCEPT** menu button to accept the entry. DATABASE UPDATED appears.
10. When you are finished with all programming, press the Speaker button or # repeatedly to exit the programming session.

## Programming the Busy Trunk Option

You can temporarily disable a trunk from service. While it is out of service it cannot be used to place outgoing calls. However, incoming calls on analog trunks will still ring in and can be answered. Incoming calls on Integrated Services Digital Network (ISDN) trunks cannot be answered. The trunk remains out of service until the Trunk Busy Out timer expires or until you place the trunk back in service.

### To program the Busy Trunk option:

**NOTE**

At any time, you can press \* to return to the previous menu, or press the Speaker button to exit the programming session and cancel any unsaved changes.

1. Dial **9932** (**9132** in Europe). If a passcode is required (see [page 23](#)), ENTER PASSCODE appears (otherwise, go to [step 3](#)).
2. Enter the passcode, and then press **#**. ENTER DATABASE OPTION (1 - 3) appears.
3. Press **3** or the **TRUNK** menu button. ENTER TRUNK OPTION appears.
4. Press **1** or the **INDIVIDUAL TRUNK** menu button. ENTER TRUNK GRP EXTENSION appears.
5. Enter the extension number, or enter a partial extension number, and then press **#** or the **ACCEPT** menu button. The extension information that best matches the partial number appears. You can use the Volume buttons or the **NEXT** and **PREVIOUS** menu buttons to scroll through entries.
6. Press **#** or the **ACCEPT** menu button to accept the entry.
7. Press **6** or the **BUSY TRUNK** menu button. MARK TRUNK BUSY (ON = 1 OFF = 2) appears.
8. Press **1** or the **ON** menu button disable the trunk, or press **2** or the **OFF** menu button to enable the trunk.
9. Press **#** or the **ACCEPT** menu button to accept the entry. DATABASE UPDATED appears.
10. When you are finished with all programming, press the Speaker button or # repeatedly to exit the programming session.

## Trunk Group Programming Options

You can program the following trunk group options:

- [Programming Trunk Group Day or Night Answer Access](#) below
- Programming Trunk Group Day or Night Ring-in on [page 37](#)
- Programming Trunk Group Toll Restrictions on [page 38](#)
- Programming Trunk Group Trunk Lists on [page 39](#)

See Figure 3 on [page 40](#) for the Trunk Group Database flowchart.

### Programming Trunk Group Day or Night Answer Access

You can program separate lists for phones with allowed-answer access in day and night modes.

**To program trunk group Day or Night Answer Access:**

**NOTE** At any time, you can press \* to return to the previous menu, or press the Speaker button to exit the programming session and cancel any unsaved changes.

1. Dial **9932** (**9132** in Europe). If a passcode is required (see [page 23](#)), ENTER PASSCODE appears (otherwise, go to [step 3](#)).
2. Enter the passcode, and then press #. ENTER DATABASE OPTION (1 - 3) appears.
3. Press **3** or the **TRUNK** menu button. ENTER TRUNK OPTION appears.
4. Press **2** or the **TRUNK GROUP** menu button. ENTER TRUNK GROUP EXTENSION appears.
5. Enter the extension number, or enter a partial extension number, and then press # or the **ACCEPT** menu button. The extension information that best matches the partial number appears. You can use the Volume buttons or the **NEXT** and **PREVIOUS** menu buttons to scroll through entries.
6. Press # or the **ACCEPT** menu button to accept the entry. ENTER TRUNK GROUP OPTION (1 - 6) appears.
7. Press **1** or the **ANS-ACCESS DAY** menu button or press **2** or the **ANS-ACCESS NIGHT** menu button. ENTER STATION EXTENSION appears.
8. Enter the extension number, or enter a partial extension number, and then press # or the **ACCEPT** menu button. The extension information that best matches the partial number appears. You can use the Volume buttons or the **NEXT** and **PREVIOUS** menu buttons to scroll through entries.
9. Press # or the **ACCEPT** menu button to accept the entry.
10. The extension number and a Yes/No menu are displayed. To include the phone in the list, press **1** or the **YES** menu button followed by #. To exclude the phone from the list, press **2** or the **NO** menu button followed by #. DATABASE UPDATED followed by ENTER STATION EXTENSION appears.
11. Select another extension number. Or, if you are finished programming the phone list, press # or the **ACCEPT** menu button.
12. When you are finished with all programming, press the Speaker button or # repeatedly to exit the programming session.



## Programming Trunk Group Day or Night Ring-in

You can program separate phone lists with ring-in for Day and Night Modes.

### To program trunk group Day or Night Ring-in:

**NOTE**

At any time, you can press \* to return to the previous menu, or press the Speaker button to exit the programming session and cancel any unsaved changes.

1. Dial **9932** (**9132** in Europe). If a passcode is required (see [page 23](#)), ENTER PASSCODE appears (otherwise, go to [step 3](#)).
2. Enter the passcode, and then press #. ENTER DATABASE OPTION (1 - 3) appears.
3. Press **3** or the **TRUNK** menu button. ENTER TRUNK OPTION appears.
4. Press **2** or the **TRUNK GROUP** menu button. ENTER TRUNK GROUP EXTENSION appears.
5. Enter the extension number, or enter a partial extension number, and then press # or the **ACCEPT** menu button. The extension information that best matches the partial number appears. You can use the Volume buttons or the **NEXT** and **PREVIOUS** menu buttons to scroll through entries.
6. Press # or the **ACCEPT** menu button to accept the entry. ENTER TRUNK GROUP OPTION (1 - 6) appears.
7. Do one of the following:
  - To program the phone that will have ring in for this trunk group for day mode, press **3** or the **RING-IN DAY** menu button.
  - To program for night mode, press **4** or the **RING-IN NIGHT** menu button. ENTER STATION EXTENSION appears.
8. Enter the extension number, or enter a partial extension number, and then press # or the **ACCEPT** menu button. The extension information that best matches the partial number appears. You can use the Volume buttons or the **NEXT** and **PREVIOUS** menu buttons to scroll through entries.
9. Press # or the **ACCEPT** menu button to accept the entry.
10. The extension number and a Yes/No menu are displayed. To include the phone in the list, press **1** or the **YES** menu button followed by #. To exclude the phone from the list, press **2** or the **NO** menu button followed by #. DATABASE UPDATED followed by ENTER STATION EXTENSION appears.
11. Select another extension number. Or, if you are finished programming the phone list, press # or the **ACCEPT** menu button.
12. When you are finished with all programming, press the Speaker button or # repeatedly to exit the programming session.

## Programming Trunk Group Toll Restrictions

You can program toll restriction classes of service for the trunk groups. See “Programming Phone Toll Restrictions” on [page 19](#) for more information.

### To program trunk group toll restrictions:

**NOTE**

At any time, you can press \* to return to the previous menu, or press the Speaker button to exit the programming session and cancel any unsaved changes.

1. Dial **9932** (**9132** in Europe). If a passcode is required (see [page 23](#)), ENTER PASSCODE appears (otherwise, go to [step 3](#)).
2. Enter the passcode, and then press #. ENTER DATABASE OPTION (1 - 3) appears.
3. Press **3** or the **TRUNK** menu button. ENTER TRUNK OPTION appears.
4. Press **2** or the **TRUNK GROUP** menu button. ENTER TRUNK GROUP EXTENSION appears.
5. Enter the extension number, or enter a partial extension number, and then press # or the **ACCEPT** menu button. The extension information that best matches the partial number appears. You can use the Volume buttons or the **NEXT** and **PREVIOUS** menu buttons to scroll through entries.
6. Press # or the **ACCEPT** menu button to accept the entry. ENTER TRUNK GROUP OPTION (1 - 6) appears.
7. Press **5** or the **TOLL RESTRICTION** menu button. TOLL RESTRICTION OPTION (1 - 4) appears.
8. Select one of the following toll restrictions:
  - **COS for day or night mode:** For Day Mode, press **1** or the **COS DAY** menu button, or press **2** or the **COS NIGHT** menu button Night Mode. SET DAY (or NIGHT) COS <number> appears. If necessary, scroll to the correct COS. When the display shows the correct COS, press **1** or the **ON** menu button to enable the toll restriction, or press **2** or the **OFF** menu button to disable it. If applicable, repeat this step to program additional COS toll restrictions.
  - **Exempt from ARS:** Press **3** or the **EXEMPT FROM ARS** button. EXEMPT FROM ARS appears. Press **1** or the **YES** menu button to enable the option, or press **2** or the **NO** menu button to disable it.
  - **Subject to toll restriction:** Press **4** or the **SUBJECT TO TOLL** menu button. When the display shows SUBJECT TO TOLL, press **1** or the **YES** menu button to enable the option. Or, press **2** or the **NO** menu button to disable it.
9. Press # or the **ACCEPT** menu button to continue. DATABASE UPDATED appears.
10. When you are finished with all programming, press the Speaker button or # repeatedly to exit the programming session.

## Programming Trunk Group Trunk Lists

You can program a list of trunks for a trunk group.

### To program trunk group trunk lists:

**NOTE**

At any time, you can press \* to return to the previous menu, or press the Speaker button to exit the programming session and cancel any unsaved changes.

1. Dial **9932** (**9132** in Europe). If a passcode is required (see [page 23](#)), ENTER PASSCODE appears (otherwise, go to [step 3](#)).
2. Enter the passcode, and then press #. ENTER DATABASE OPTION (1 - 3) appears.
3. Press **3** or the **TRUNK** menu button. ENTER TRUNK OPTION appears.
4. Press **2** or the **TRUNK GROUP** menu button. ENTER TRUNK GROUP EXTENSION appears.
5. Enter the extension number, or enter a partial extension number, and then press # or the **ACCEPT** menu button. The extension information that best matches the partial number appears. You can use the Volume buttons or the **NEXT** and **PREVIOUS** menu buttons to scroll through entries.
6. Press # or the **ACCEPT** menu button to accept the entry. ENTER TRUNK GROUP OPTION (1 - 6) appears.
7. Press **6** or the **TRUNK LIST** menu button. ENTER TRUNK EXTENSION appears.
8. Enter the extension number, or enter a partial extension number, and then press # or the **ACCEPT** menu button. The extension information that best matches the partial number appears. You can use the Volume buttons or the **NEXT** and **PREVIOUS** menu buttons to scroll through entries.
9. Press # or the **ACCEPT** menu button to accept the entry.
10. The display shows the extension number and a Yes/No menu. To include the phone in the list, press **1** or the **YES** menu button followed by #. To exclude the phone from the list, press **2** or the **NO** menu button followed by #. DATABASE UPDATED followed by ENTER TRUNK EXTENSION appears.
11. Select another extension number. Or, if you are finished programming the phone list, press # or the **ACCEPT** menu button.
12. When you are finished with all programming, press the Speaker button or # repeatedly to exit the programming session.

Figure 3. Trunk Database Programming Flowchart


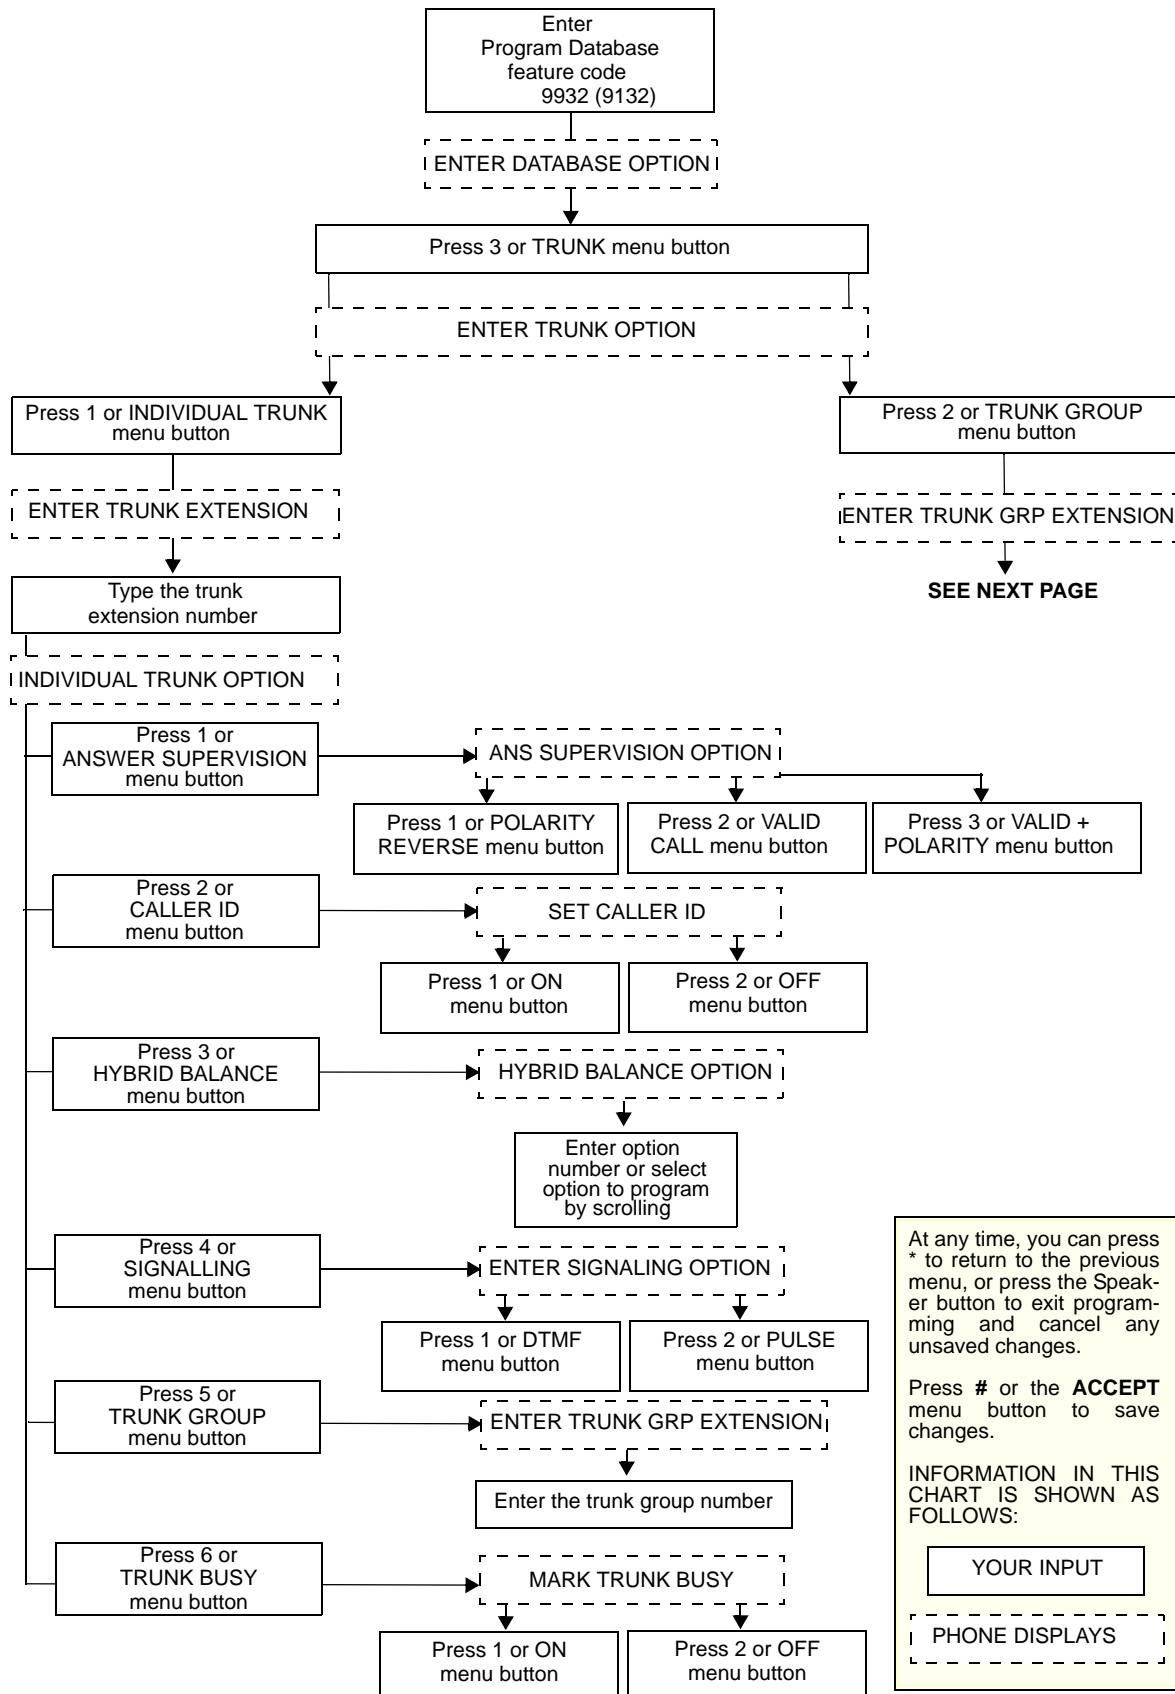


Figure 3. Trunk Database Programming Flowchart (Continued)

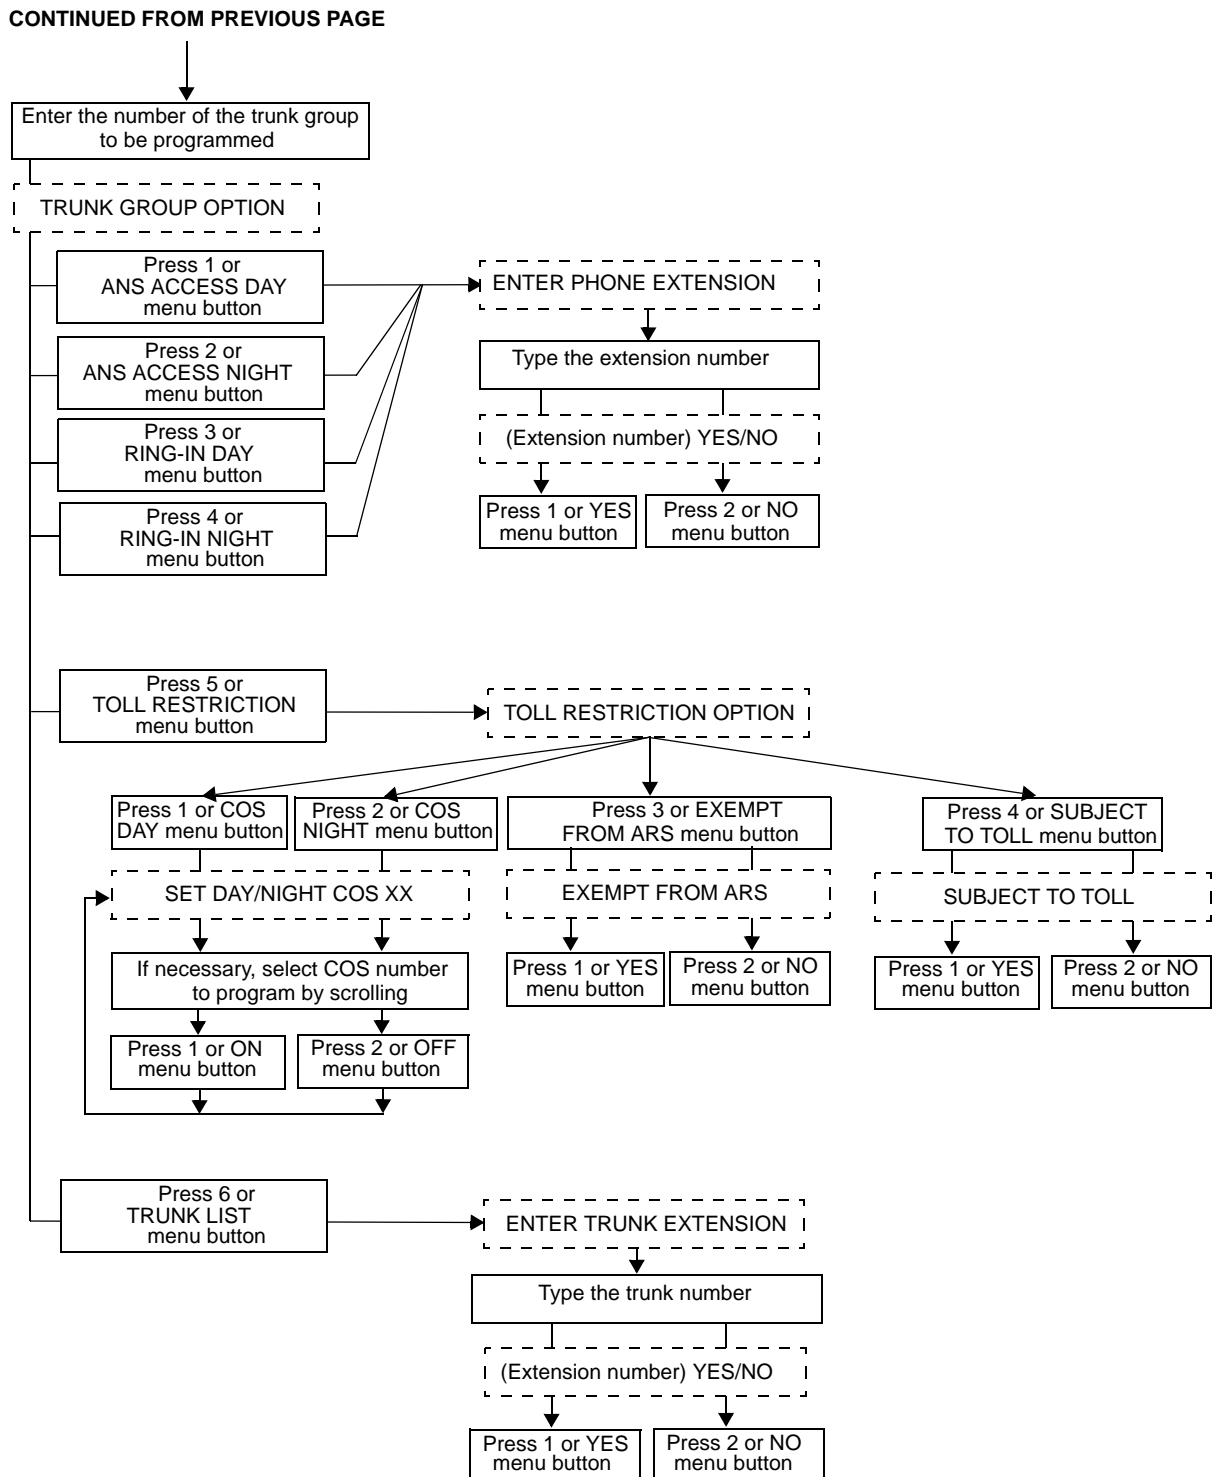

## Alarms

Alarms are generated on phones as the result of continuous self-diagnostics run within the system and are a basic indicator that there is a problem or potential problem with the system. The severity and type of alarm determines the corrective action necessary to resolve the problem.

To allow you to monitor multiple nodes, the system provides both system alarms, which includes voice processing alarms, and network-wide alarms. See Table 12 on [page 45](#) for the complete list of minor system and voice processing alarms.

### Alarm Types

On the 5000 CP, alarms are grouped into the following categories:

- **Minor System alarms** (000–019): These alarms indicate a minor system that can often be addressed without calling service personnel.
- **Minor Voice Processing alarms** (020–039): These alarms indicate a minor voice processing problem that can often be addressed without calling service personnel.

**NOTE**

Even when a voice processing alarm has been registered, the system may still function correctly.

- **Major System alarms** (100–199): These alarms indicate a system problem that requires calling service personnel.
- **Major Voice Processing alarms** (200–224): These alarms indicate a voice processing problem that requires calling service personnel.
- **Network alarms** (225–244): These alarms indicate a system or voice processing problem generated from a remote node. These alarms are handled the same as the local alarm is handled. When a network alarm occurs, the local alarm (number) equivalent is displayed on the first line of your administrator's phone and the node where the alarm originated is indicated on the second line. What distinguishes a network alarm from a local alarm is the node information that appears on the second line of the phone's display.

**NOTE**

The actual alarm numbers 225–244 are used internally by the system and do not appear on your administrator's phone. Instead, your administrator phone shows the equivalent local alarm number between 000 and 224.

- **System Application alarms** (A1001-A1099): These alarms indicate an issue with one of the system applications. See the individual alarms to determine the level of service required.

### Network Alarms

The system provides both system alarms, including voice processing alarms, and network-wide alarms so you can monitor multiple nodes:

- **Network-Wide Alarms:** When an event occurs that generates a network-wide alarm, the alarm is broadcast to every node in the system. This is configurable in DB Programming by your system administrator.
- **System Alarms:** System alarms appear only on the node on which the alarm was generated.

## Alarm Differences

The system Alarm Reporting feature detects equipment failures. If there is a system failure that affects service, a major alarm appears at all affected phones. When a minor equipment failure occurs, a minor alarm is generated and appears on the primary attendant's display and, if enabled, at your administrator phone. When a Voice Mail alarm is in effect, the telephone system may be functioning properly, but the voice processing system may be inoperative.

To differentiate between network-wide and local alarms, network-wide alarms appear on administrator phones preceded by NET ALARM, and local system alarms are preceded with SYS ALARM. Network-wide alarms override system alarms on your administrator phone. On remote nodes, network-wide alarms indicate the name of the node on which the alarm occurred. The node name is obtained from the username in DB Programming, if one is entered. Otherwise, only the node number appears.

A major alarm message, MAJOR ALARM, appears on all display phones in the event of a system-wide failure. The warning might also appear on a single phone if the phone or its cabling is defective. Because they indicate that all or part of the system is inoperative, major alarms require immediate attention from service personnel.

## Responding to Alarms

A major alarm requires you to contact service personnel, while a minor alarm may or may not require you to contact service personnel in addition to clearing the alarm.

### To respond to a major alarm:

Take the action as described below:

- **#100-199 (major system alarms):** An equipment failure has occurred that requires the attention of service personnel.
- **#200-224 (major voice processing alarms):** An equipment failure has occurred that requires the attention of service personnel.
- **SYS ALARM #NNNN:** Contact service personnel.
- **CALL TECHNICIAN:** Write down all alarm information, including what was taking place when the alarm occurred, and then contact service personnel.

### To respond to a minor alarm:

1. When a minor alarm indication appears, write down the alarm information.
2. While on-hook, clear the alarm as described in "Clearing Alarms" on [page 44](#). SYSTEM (or NETWORK) ALARM CLEARED appears.
3. Take the appropriate action as indicated in Table 12 on [page 45](#). If an alarm is not listed in the table, contact service personnel.

## Clearing Alarms

You can clear a network-wide alarm on the local node only or on every node in the network. To clear an alarm, you can use either the administrator feature codes or menu buttons.

### To use the feature codes to clear alarms:

Dial one of the following feature codes to clear the alarm:

- **Clear Network Alarm (9851):** This feature code clears network-wide alarms on every node in the network, but it does not affect system alarms. The Clear Network Alarm feature code may be entered on any node in the network, but the Send Network Alarms flag must be set for you to clear alarms on other nodes in the network.
- **Clear System Alarm (9850):** This feature code clears all local and network-wide system alarm displays on your node.

After you enter the feature code, SYSTEM (or NETWORK) ALARM CLEARED appears, and the highest priority alarm is cleared. If applicable, enter the feature code again to clear the next alarm in the queue (only one alarm is cleared at a time).

### To use menu buttons to clear alarms:

Do one of the following:

- Press the **CLEAR ALL ALARMS** menu button to clear all alarms. ALL ALARMS CLEARED appears, and the display returns to the idle menu.
- Press the **CLEAR ALARM** menu button to clear the currently displayed alarm. SYSTEM (or NETWORK) ALARM CLEARED appears, and the display shows the next highest priority, if applicable. If there are no more alarms, the display returns to the idle menu.



**Table 12. Minor System and Voice Processing Alarms**

| Alarm Text                             | Description and Action Required  |
|--|--|
| SYS ALARM #10<br>xNNNN OFF HOOK        | <p>A phone has remained off-hook and inactive past the expiration of the Inactivity Alarm timer. The display and the SMDR indicate which phone is off-hook. The lamps in the button for that station on attached Direct Station Select (DSS) units or Programmable Key Module (PKM) units and on the Speed Dial buttons of other phones flutter continuously.</p> <p>Locate the phone and replace the handset in the cradle. Calls being transmitted over the secondary voice path are not affected or interrupted by an off-hook alarm condition.</p>   |
| SYS ALARM #11 xNNNN<br>EMERGENCY       | <p>A user has dialed the Emergency Call feature code. The system has seized a trunk and dialed the emergency phone number that will bring responders to the location where the 5000 CP Base Server is installed.</p> <p>The default Emergency Call code for U.S. systems is 911, and the default code for European systems is 999. Emergency dial sequences, such as 112 for some European localities, can be programmed for the location where the 5000 CP Base Server is installed. However, if an appropriate emergency phone number is dialed from a remote location to ensure response to that location, no alarm will appear at the administrator phones.</p> <p>No action is required, just clear the alarm. To facilitate emergency services reaching the party in need, determine who made the emergency call and where help is needed.</p> |
| SYS ALARM #16<br>NO DELAYED MAJOR      | <p>The system was unable to perform a scheduled delayed major reset because the system was not idle.</p> <p>If this alarm recurs, contact service personnel.</p>   |
| SYS MGR LINK ERR #17<br><error string> | <p>The certificate is not yet valid or the system is not connected to the appropriate System Manager server.</p> <p>Contact service personnel.</p>   |
| SYS ALARM #18<br>SYS MGR INV CERT      | <p>A corrupt certificate was uploaded or there was an error in writing the file.</p> <p>Contact service personnel.</p>   |
| SYS ALARM #20<br>CHECK PRINTER         | <p>The printer is not functioning properly.</p> <p>Check that the cable and the power cord are connected, and that it has paper and toner.</p>   |
| SYS ALARM #21<br>V-MAIL 80% FULL       | <p>The external voice mail disk space is 80 percent full. If it reaches 100 percent, Voice Mail cannot accept any messages until disk space is made available.</p> <p>Contact service personnel.</p>   |
| SYS ALARM #22<br>V-MAIL 100% FULL      | <p>100 percent of the external voice mail disk space is in use. Voice mail cannot accept any messages until disk space is made available.</p> <p>Contact service personnel.</p>  |
| SYS ALARM #23<br>SMDR 80% FULL         | <p>The SMDR disk space on the external voice processing system is 80 percent full. If it reaches 100 percent before the SMDR information is cleared, no further SMDR recording will be possible.</p> <p>Contact service personnel.</p>   |
| SYS ALARM #24<br>SMDR 100% FULL        | <p>100 percent of the SMDR disk space on the external voice processing system is in use. No further SMDR recording is possible.</p> <p>Contact service personnel.</p>  |
| SYS ALARM #32<br>INSUF BAND            | <p>The IP Network does not have enough bandwidth to support the IP call that is currently connected to the extension. If this alarm is generated frequently, it could indicate a network problem that requires the attention of your network administrator.</p>  |

## Internal Modem

The 5000 CP internal modem performs multiple functions. When enabled, the modem is used for DB Programming, Message Print, SMDR, and for uploading software licenses.

### Enabling or Disabling the Internal Modem

If disabled, the modem and extension are placed into DND. In DND, the modem rejects all calls and does not allow camp ons. Any outside calls that attempt to ring a disabled modem are automatically transferred to the primary attendant.

**To enable/disable a modem:**

1. Dial **9866** (Modem Enable) or **9867** (Modem Disable). ENABLE (DISABLE) MODEM EXT # appears.
2. Enter the extension of the modem to enable or disable it. MODEM ENABLED (or DISABLED) appears.

If an invalid modem extension is entered, INVALID MODEM EXTENSION appears.

### Resetting the Internal Modem

The internal modem must be reset if it fails to answer an incoming call or is out of synchronization with an external modem.

#### NOTICE

**Possible data corruption.** Do not reset the modem if it is connected to a DB Programming session. If you do, the programming session is dropped, potentially corrupting the database. For this reason, Mitel recommends that you assign the modem extension to a Speed Dial button. During a reset, any call connected to the modem is dropped.

**To reset the internal modem:**

1. Dial **9869**. RESET MODEM EXT# appears.
2. Enter the modem extension number. MODEM RESET appears.

If an invalid modem extension is entered, INVALID MODEM EXTENSION appears.

## Network Group Diagnostics

The Network Group Diagnostics feature allows you to verify that Network Groups have been programmed correctly. When the Network Group Diagnostics feature code is entered, the platform initiates pings from each system-connected device and determines if the other devices respond to the ping. If a device does not respond to the ping or if a firewall is detected, the system issues a Message Print message. For more information about Message Print, refer to the *Message Print Diagnostics Manual*, part number 550.8018.

The Network Group Diagnostics feature works on proprietary IP devices for the local node only. It does not work across nodes.

### Running Network Group Diagnostics

#### NOTICE

**System Performance.** Because this feature affects system performance, run the diagnostics program after normal business hours when the system is idle.

#### To run the Network Group Diagnostics:

1. Dial **9900** (**9100** in Europe) to turn on diagnostics mode. DIAGNOSTICS ON appears.
2. Dial **9963** (**9163** in Europe). NET GRP CHECK (YES = 1 NO = 2) appears.
3. When prompted, press **1** or the **ACCEPT** menu button to start the diagnostics feature. NET GROUP DIAG IN PROGRESS appears.

When the diagnostics are complete, the phone displays one of the following messages:

- **NET GROUP CHECK COMPLETED:** Indicates that all IP devices within the Network Groups are capable of communicating using peer-to-peer audio.
- **NET GROUP CHECK ERRORS FOUND:** Indicates that either some of the IP devices are offline or there are NATs/firewalls located between the devices. Check Message Print to determine which errors occurred.

## Seizing a Device

For troubleshooting purposes, you can enable diagnostics mode and then seize a specific trunk or extension by entering the module, circuit, and device number.

The Seize Device feature is affected by trunk restriction. The administrator phone must have outgoing access permission for the trunk to seize it. Toll restriction is applied to any calls placed after the trunk is seized.

### To seize a device:

1. Dial **9900 (9100 in Europe)**, to turn on diagnostics mode. DIAGNOSTICS ON appears.
2. Press the Special button (see [page 7](#)), and then dial **9973 (9173 in Europe)**. ENTER BOARD appears.
3. Enter the board (module) number, **not** the unit number, where the device to be seized is located, while observing the following conditions:
  - *If you enter a single digit, press # after the digit to continue.*
  - *If you enter an incorrect module number or if the module is not entered in the system, INVALID BOARD NUMBER appears.*
  - *If you have multiple ports (for example, dual-T1 or Internet Protocol Resource Application (IPRA) ports) ENTER PORT appears.*
4. Enter the (port) circuit number of the device to be seized. If you enter a single digit, press # after the digit to continue. Valid numbers depend on the type of module. If you enter an invalid module number, INVALID MODULE NUMBER appears.

*If there is only one device on the selected port, the selected device is seized as if the user had directly entered the extension or trunk number.*

*If there is more than one device on the selected port, ENTER DEVICE appears. Enter the number of the device to be seized. Valid numbers depend on the type of devices installed. If you enter an invalid device number, INVALID DEVICE NUMBER appears. When the device has been selected, it is seized as if the user had directly entered the extension or trunk access number.*

5. Dial **9900 (9100 in Europe)** to turn off diagnostics mode. DIAGNOSTICS OFF appears.

## History Freezes

When certain system failures occur, service personnel may request a system history freeze (system data snapshot), so they can analyze system activity for the time period preceding the alarm.

**NOTE** Do not perform these procedures unless directed to do so by service personnel.

### Freezing or Unfreezing the System History

You can freeze or unfreeze the current node system history.

**To freeze or unfreeze system history:**

1. Dial **9900 (9100 in Europe)** to turn on diagnostics mode. DIAGNOSTICS ON appears.
2. Dial **9993 (9193 in Europe)** to freeze the system history, or dial **9998 (9198 in Europe)** to unfreeze the system history. HISTORY FROZEN (or UNFROZEN) appears. If you try to change the state of the system history to its current status, HISTORY ALREADY FROZEN (or UNFROZEN) appears.
3. Dial **9900 (9100 in Europe)** to turn off diagnostics mode. DIAGNOSTICS OFF appears.

### Freezing or Unfreezing the Network History

You can freeze or unfreeze the network history for any node in the network. Service personnel can then pull the information from each node for troubleshooting purposes. Nodes are assigned to freeze zones by the database programmer to allow selective freezes. You must know which zone to freeze or unfreeze.

A node can be in more than one freeze zone. If you freeze a zone that contains a node that is already frozen, SOME NODES ALREADY FROZEN appears and the node remains frozen. If you unfreeze a zone with unfrozen nodes in it, SOME NODES ALREADY UNFROZEN appears. To determine the individual freeze status of the nodes, check the Message Print output.

**To freeze or unfreeze network history:**

1. Dial **9900 (9100 in Europe)** to turn on diagnostics mode. DIAGNOSTICS ON appears.
2. Dial **9939 (9139 in Europe)** to freeze the history a network node, or dial **9989 (9189 in Europe)** to unfreeze the history of a network node. SELECT FRZ ZONE (0–9) # appears.
3. Enter the number of the node you want to freeze or unfreeze. FREEZE ZONE XX IS FROZEN (or UNFROZEN) appears. If you try to change the state of the system history to its current status, FREEZE ZONE XX ALREADY FROZEN (or UNFROZEN) appears.
4. Dial **9900 (9100 in Europe)** to turn off diagnostics mode. DIAGNOSTICS OFF appears.



---

# Reference

|   |           |
|---|-----------|
| <b>Troubleshooting Tips</b> .....                   | <b>52</b> |
| System Administrator and Provider Information ..... | 52        |
| Administrator Troubleshooting Tips .....            | 52        |
| <b>Programming Planning Sheets</b> .....            | <b>53</b> |
| Administrator Phone Passcode .....                  | 53        |
| Phone Information .....                             | 53        |
| Do-Not-Disturb Messages .....                       | 54        |
| Reminder Messages .....                             | 55        |
| Changing Station Extension Numbers .....            | 56        |
| Swapping Stations .....                             | 56        |
| Individual Trunk Programming .....                  | 57        |
| Trunk Group Programming .....                       | 57        |
| <b>Default Feature Codes</b> .....                  | <b>58</b> |
| Administrator Feature Codes .....                   | 58        |
| Diagnostics Feature Codes .....                     | 59        |
| Trunk Access Codes .....                            | 62        |
| Phone Feature Codes .....                           | 62        |

## Troubleshooting Tips

The following sections include information to help you troubleshoot problems:

- [System Administrator and Provider Information](#) below
- [Administrator Troubleshooting Tips](#) below

### System Administrator and Provider Information

Because this guide covers administrator phone features only, you may find that you need additional assistance from your system administrator for issues such as creating new user accounts or changing system settings.

Your system administrator may be on site, or you may rely on your local provider (the company that installed your phone system and now services it) for system administration. All sales, service, and technical support are handled at the local level by your authorized Mitel provider. If you do not know the contact information for your local provider, use the “Partners – Mitel Partner Locator” link at the top of the [Mitel Web site](http://www.mitel.com) (www.mitel.com) to locate a nearby office.

### Administrator Troubleshooting Tips

[Table 13](#) includes administrator troubleshooting tips.

**Table 13.** *Administrator Troubleshooting Tips*

| Problem   | Possible Solution  |
|---|--|
| I cannot access administrator phone features.   | You may be experiencing one of the following: <ul style="list-style-type: none"><li>• You may not be using the administrator phone assigned by the system administrator.</li><li>• If passcode protection is enabled, you must enter a passcode before you can access administrator phone features. To determine your passcode, contact your system administrator or local authorized provider. See <a href="#">“System Administrator and Provider Information”</a> above.</li></ul> |
| One of our employees has left the company, and I need to change the user name shown on the display. | See <a href="#">“Programming Extension User Names”</a> on <a href="#">page 18</a> .  |
| I need to change the system time shown on the phone displays.                                       | See <a href="#">“Setting the System Date and Time”</a> on <a href="#">page 13</a> .  |
| I cannot clear an alarm shown on the phone display.   | You can use the administrator phone to clear alarms by entering the Clear System Alarm feature code (9850).  |



**Table 13. Administrator Troubleshooting Tips (Continued)**

| Problem   | Possible Solution   |
|---|---|
| System users cannot use “*67” to block Caller ID when placing external calls.           | To use “*67,” you must select an outside line directly rather than using Automatic Route Selection to select outside lines. Contact your system administrator or local authorized provider for more information. See “System Administrator and Provider Information” on <a href="#">page 52</a> . |
| I can change the system time, but when I come in the morning, a different time appears. | Your system may be configured to use Network Time Protocol (NTP), which automatically synchronizes network date and time at 12:15 A.M. daily, but the NTP server time is incorrect. Contact your system administrator for assistance in correcting the time on the NTP server.                    |

## Programming Planning Sheets

The following sections can help you plan and program your system. Use the sections for reference and to record system-related information.

### Administrator Phone Passcode

Administrator phone passcode: \_\_\_\_\_

### Phone Information

For each phone you are programming, record the following information.

**Table 14. Phone Information**

| Options                             | Setting   |
|-------------------------------------|-----------|
| Phone extension number              |           |
| User name                           |           |
| Toll restriction classes of service |           |
| Administrator phone?                | Yes or No |
| Attendant phone?                    | Yes or No |
| House phone?                        | Yes or No |

## Do-Not-Disturb Messages

You can change the default DND messages shown in [Table 15](#). See “Changing Do-Not-Disturb (DND) Messages” on [page 24](#).

**Table 15.** *Do-Not-Disturb Messages*

| Default DND Message               | Primary Language DND Message | Secondary Language DND Message |
|-----------------------------------|------------------------------|--------------------------------|
| MESSAGE 01 (DO-NOT-DISTURB)       |                              |                                |
| MESSAGE 02 (LEAVE A MESSAGE)      |                              |                                |
| MESSAGE 03 (IN MEETING UNTIL)     |                              |                                |
| MESSAGE 04 (IN MEETING)           |                              |                                |
| MESSAGE 05 (ON VAC. HOLIDAY 'TIL) |                              |                                |
| MESSAGE 06 (ON VAC. HOLIDAY)      |                              |                                |
| MESSAGE 07 (CALL ME AT)           |                              |                                |
| MESSAGE 08 (AT THE DOCTOR)        |                              |                                |
| MESSAGE 09 (ON A TRIP)            |                              |                                |
| MESSAGE 10 (ON BREAK)             |                              |                                |
| MESSAGE 11 (OUT OF TOWN 'TIL)     |                              |                                |
| MESSAGE 12 (OUT OF OFFICE)        |                              |                                |
| MESSAGE 13 (OUT UNTIL)            |                              |                                |
| MESSAGE 14 (WITH A CLIENT)        |                              |                                |
| MESSAGE 15 (WITH A GUEST)         |                              |                                |
| MESSAGE 16 (UNAVAILABLE)          |                              |                                |
| MESSAGE 17 (IN CONFERENCE)        |                              |                                |
| MESSAGE 18 (AWAY FROM DESK)       |                              |                                |
| MESSAGE 19 (GONE HOME)            |                              |                                |
| MESSAGE 20 (OUT TO LUNCH)         |                              |                                |

## Reminder Messages

You can change the default Reminder Messages shown in [Table 16](#). See “Changing Default Reminder Messages” on [page 25](#).

**Table 16.** *Reminder Messages*

| Default Reminder Message      | Primary Language Reminder Message | Secondary Language Reminder Message |
|-------------------------------|-----------------------------------|-------------------------------------|
| MESSAGE 01 (MEETING)          |                                   |                                     |
| MESSAGE 02 (STAFF MEETING)    |                                   |                                     |
| MESSAGE 03 (SALES MEETING)    |                                   |                                     |
| MESSAGE 04 (CANCEL MEETING)   |                                   |                                     |
| MESSAGE 05 (APPOINTMENT)      |                                   |                                     |
| MESSAGE 06 (PLACE CALL)       |                                   |                                     |
| MESSAGE 07 (CALL CLIENT)      |                                   |                                     |
| MESSAGE 08 (CALL CUSTOMER)    |                                   |                                     |
| MESSAGE 09 (CALL HOME)        |                                   |                                     |
| MESSAGE 10 (CALL CORPORATE)   |                                   |                                     |
| MESSAGE 11 (CALL ENGINEERING) |                                   |                                     |
| MESSAGE 12 (CALL MARKETING)   |                                   |                                     |
| MESSAGE 13 (CALL ACCOUNTING)  |                                   |                                     |
| MESSAGE 14 (CANCEL DND)       |                                   |                                     |
| MESSAGE 15 (CANCEL CALL FWD)  |                                   |                                     |
| MESSAGE 16 (TAKE MEDICATION)  |                                   |                                     |
| MESSAGE 17 (MAKE RESERVATION) |                                   |                                     |
| MESSAGE 18 (REVIEW SCHEDULE)  |                                   |                                     |
| MESSAGE 19 (LUNCH)            |                                   |                                     |
| MESSAGE 20 (REMINDER)         |                                   |                                     |

## Changing Station Extension Numbers

See “Changing Phone Extension Numbers” on [page 26](#).

**Table 17.** *Station Extension Numbers*

| Old Extension Number | New Extension Number |
|----------------------|----------------------|
|                      |                      |
|                      |                      |
|                      |                      |
|                      |                      |
|                      |                      |
|                      |                      |
|                      |                      |
|                      |                      |
|                      |                      |
|                      |                      |
|                      |                      |
|                      |                      |
|                      |                      |
|                      |                      |

## Swapping Stations

See “Swapping Phone Extension Numbers” on [page 27](#).

**Table 18.** *Swapped Extension Numbers*

| Extension Number | Swapped with Extension |
|------------------|------------------------|
|                  |                        |
|                  |                        |
|                  |                        |
|                  |                        |
|                  |                        |
|                  |                        |
|                  |                        |
|                  |                        |
|                  |                        |
|                  |                        |
|                  |                        |
|                  |                        |
|                  |                        |
|                  |                        |
|                  |                        |

## Individual Trunk Programming

Record the information in [Table 19](#) for each trunk you want to program.

**Table 19.** *Individual Trunk Programming*

| Information Required     | Responses   |
|--------------------------|---|
| Answer Supervision Type: | Polarity Reversal or Valid Call<br><i>or</i><br>Valid Call with Polarity Reversal |
| Caller ID?               | Yes <i>or</i> No  |
| Hybrid Balance:          |   |
| Signaling:               | DTMF <i>or</i> Dial Pulse   |
| Trunk Group Number:      |   |
| User name:               |   |

## Trunk Group Programming

Record the following information in [Table 20](#) for each trunk group you want to program.

**Table 20.** *Trunk Group Programming*

| Information Required                 | Programming Plan |
|--------------------------------------|------------------|
| Phones with Day Answer Access:       |                  |
| Phones with Night Answer Access:     |                  |
| Phones with Day Ring In:             |                  |
| Phones with Night Ring In:           |                  |
| Toll Restriction Classes of Service: |                  |
| Trunks in Trunk Groups:              |                  |

## Default Feature Codes

Each of the station features is assigned a feature code. Using the station's dialpad, these codes are entered to select trunks, process calls, and use special features. The following tables show default feature code values:

- [Administrator Feature Codes](#) below
- [Diagnostics Feature Codes](#) on [page 59](#)
- [Phone Feature Codes](#) on [page 62](#)
- [Trunk Access Codes](#) on [page 62](#)

### Administrator Feature Codes

[Table 21](#) summarizes feature codes accessible on administrator phones only.

**Table 21.** *Administrator Feature Codes*

| Feature Name         | Code<br>U.S. (Eur.) | Definition  |
|----------------------|---------------------|---|
| Clear Network Alarm  | 9851                | Clears network-wide alarms on every node in the network, but will not affect system alarms. The Clear Network Alarm feature code may be entered on any node in the network, but the Send Network Alarms flag must be set for the administrator to clear alarms on other nodes in the network.                               |
| Clear System Alarm   | 9850                | Clears all local and network-wide system alarm displays on your node.   |
| Diagnostics On/Off   | 9900 (9100)         | Enables or disables system diagnostics mode to perform diagnostics functions such as freezing or unfreezing the database, printing message logs, and seizing a device for troubleshooting purposes.<br>Because diagnostics mode affects system performance, you should run the diagnostics program when the system is idle. |
| Enable Network Day   | 9862                | Places any or all remote nodes into day mode (you are prompted for the node number).  |
| Enable Network Night | 9861                | Places any or all remote nodes into night mode (you are prompted for the node number).  |
| Modem Disable        | 9867                | Disables the internal modem; used in conjunction with the assigned extension number of the modem.   |
| Modem Enable         | 9866                | Enables the internal modem; used in conjunction with the assigned extension number of the modem.  |
| Modem Reset          | 9869                | Resets the internal modem when the modem fails to answer an incoming call or to synchronize with an external modem.<br><br><b>NOTICE</b><br>Database corruption could occur if the modem is reset during a DB Programming session. Mitel recommends that you assign the modem extension to a Speed Dial button.             |
| Night Ring On/Off    | 9860                | Places system in night mode or cancels night mode. While in night mode, the night toll and trunk restriction lists are used.  |

**Table 21.** Administrator Feature Codes (Continued)

| Feature Name                | Code<br>U.S. (Eur.) | Definition   |
|-----------------------------|---------------------|--|
| Periodic Diagnostics On/Off | 9825                | Periodic diagnostics extends and improves the functionality and checks and reconciliations performed on various resources in the system.   |
| Program System Speed Dial   | 9801                | Programs system-wide Speed Dial numbers when followed by location codes (000–999 or 0000-4999).  |
| Set Network Date/Time       | 9810                | Programs the time and date for all nodes in the system. Local time and date can also be reset by individual nodes.   |
| Set Time/Date               | 9800                | Programs system time and date.   |
| Synchronize Network Time    | 9811                | Synchronizes the minutes past the hour across the network. If a node's time is off by more than 30 minutes, synchronizing the minutes may cause the hour to change. Also, network time is automatically synchronized every day at 12:30 AM (00:30), using the time setting on the node with the lowest number. |

## Diagnostics Feature Codes

You must use the administrator phone and enter the Diagnostics Mode feature code (9900) [9100 in Europe] before you can use the feature codes summarized in [Table 22](#).

**Table 22.** Diagnostics Feature Codes

| Feature Name                | Code<br>U.S. (Eur.) | Definition  |
|-----------------------------|---------------------|---|
| Compression On/Off          | 9982 (9182)         | Compresses call processing messages sent to DB Programming, speeding up transfers. You should not disable this feature unless instructed to do so by support personnel.   |
| Compression Statistics      | 9981 (9181)         | Dumps various statistics related to the DB Programming compression algorithm. This feature should be used only when directed to do so by support personnel.   |
| Diagnostic – ASAI Snoop Off | 9926 (9126)         | Turns off the ASAI output to Message Print. ASAI is the protocol the system uses to talk to DB Programming and the AVDAP. Turning this feature on helps the support personnel debug the messaging between Call Processing and DB Programming or Call Processing and the AVDAP.  |
| Diagnostic – ASAI Snoop On  | 9927 (9127)         | Turns on the ASAI output to Message Print. ASAI is the protocol the system uses to talk to DB Programming and the voice processing system. Turning this feature on helps the support personnel debug the messaging between Call Processing and DB Programming or Call Processing and the AVDAP.                         |
| Diagnostic – Dump Extension | 9933 (9133)         | Allows a field technician to dump a device or structure when debugging a problem. The system dumps the internal data structures for that extension to message print. If you press the pound button (#) you are prompted for a command. The command allows you to enter an alphanumeric string of the structure to dump. |

**Reference**  
**Diagnostics Feature Codes**

**Table 22. Diagnostics Feature Codes (Continued)**

| Feature Name   | Code<br>U.S. (Eur.)            | Definition  |
|--|--------------------------------|---|
| Diagnostic –<br>Dump Node Information  | 9936 (9136)                    | <p>Pressing the Dump Node Information feature code dumps specified node information to Message Print for diagnostic purpose. When the system prompts for a node number, enter the applicable node number or zero (0) for all nodes within a network. If the node does not exist, an error message saying INVALID NODE NUMBER appears and prompts you for a node number again.</p> <p>After entering a node number, the system displays a confirmation message on the phone display. This helps you analyze which nodes are up and which nodes are down (the word 'down' does not mean that the node is completely down, it simply means the node is unreachable). For Example:</p> <p>If all nodes are up, the display shows ALL NODES ARE UP X. The 'X' represents the total number of the nodes.</p> <p>If node 3 and 5 of a 5-node network are down, the display shows # NODES DOWN 2 3 5.</p> |
| Diagnostic –<br>Heap Dump  | 9943 (9143)                    | For internal engineering use only.  |
| Diagnostic –<br>Heap Statistics  | 9947 (9147)                    | This feature code outputs miscellaneous heap information to Message Print as well as putting up a message on the phone that indicates the percentage of available dynamic heap memory. This feature code is useful in determining if the system is losing heap memory and how quickly the system may be losing it.  |
| Diagnostic –<br>ISDN View  | 9948 (9148)                    | <p>This feature code toggles through the three different ISDN view output modes.</p> <p>Entering the feature code the first time puts the ISDN view feature into headers only mode. In this mode the system outputs all ISDN messages to Message Print in header format (that is, it does not contain any ISDN information elements).</p> <p>Entering the feature code the second time puts the ISDN view feature into full mode. In this mode the system outputs all ISDN message to Message Print in full format (that is, each ISDN information element).</p> <p>Entering the feature code one more time turns this feature off.</p>   |
| Diagnostic –<br>Major Reset  | 9962 (9162)                    | For internal engineering use only.  |
| Diagnostic –<br>Mark As Leaks  | 9945 (9145)                    | For internal engineering use only.  |
| Diagnostic - Mark As<br>Quiescent  | 9946 (9146)                    | For internal engineering use only.  |
| Diagnostic –<br>Minor Reset  | 9964 (9164)                    | For internal engineering use only.  |
| Diagnostic –<br>Network Freeze Zone<br>System Histories<br><br>Diagnostic –<br>Network Unfreeze Zone<br>System Histories | 9939 (9139)<br><br>9989 (9189) | The system fault history for any freeze zone in the network can be halted (frozen) or re-enabled using these feature codes when diagnostics mode is enabled. The fault history can then be extracted from each zone and used by service personnel when troubleshooting the system.  |



**Table 22. Diagnostics Feature Codes (Continued)**

| Feature Name                       | Code<br>U.S. (Eur.)      | Definition  |
|------------------------------------|--------------------------|---|
| Diagnostic –<br>Network Groups     | 9963 (9163)              | Allows you to verify that the Network Groups on the local node are programmed properly. When 9963 is entered at an administrator's phone, the telephone system initiates pings from each IP device on the local node and determines if the other devices respond to the ping. If a device does not respond to the ping or if a firewall is detected, the system issues a Message Print message. |
| Diagnostic –<br>Print Auxdata      | 9972 (9172)              | (Not Programmable) Sends a report to a designated printer or file that shows system reset history information to be used for troubleshooting purposes.  |
| Diagnostic –<br>Print Message Log  | 9975 (9175)              | (Not Programmable) Sends a report to a designated printer or file that lists system error messages to be used for troubleshooting purposes.   |
| Diagnostic –<br>Print Network Log  | 9976 (9176)              | This feature code prints the network log to message print. This feature is useful in determining the system of a networked system.  |
| Diagnostic –<br>Query Node Traffic | 9978 (9178)              | Using this feature code you can query the status of various devices on the system based on the status of the traffic flags in DB Programming. The output is sent to Message Print.  |
| Diagnostic –<br>Show Version       | 9928 (9128)              | To check the call processing software version at an administrator's phone, you can enable diagnostics mode, then enter this feature code to view the version and date of the call processing software. However, feature code 9928 displays the firmware version of the phone if it is in SIP mode.  |
| Diagnostic –<br>SIP View           | 9987 (9187)              | Allows you to change the system wide SIP output value. Options include No Output, Headers, and Full Output.   |
| Diagnostic –<br>Spare 1–3          | 9910–9912<br>(9110–9112) | For internal engineering use only.  |
| Diagnostic –<br>System History     | 9974 (9174)              | For internal engineering use only.  |
| Diagnostic –<br>View Displays      | 9983 (9183)              | For internal engineering use only.  |
| Program Database                   | 9932 (9132)              | Can be used for programming phone, system, and trunk parameters.  |
| Seize Device                       | 9973 (9173)              | Used during troubleshooting to seize a specific trunk or phone by indicating the board number, port number, and device number.  |
| System History –<br>Freeze         | 9993 (9193)              | The system fault history can be frozen or unfrozen using these feature codes when diagnostics mode is enabled. Fault history is used by service personnel when troubleshooting the system.  |
| System History –<br>Unfreeze       | 9998 (9198)              |   |

## Trunk Access Codes

Table 23 lists trunk access codes used to select trunks when placing outgoing calls.

**Table 23.** *Trunk Access Codes*

| Feature Name                    | Code U.S. (Eur.)                  | Definition   |
|---------------------------------|-----------------------------------|--|
| Automatic Route Selection (ARS) | 92000                             | Allows the system to select the route wanted for placing a call, as programmed in the database.  |
| Trunk Group Access 1–208        | 92001–92208                       | Selects an available trunk from a programmed group of trunks for placing an outside call.  |
| Emergency Call                  | 911<br>(999/112 or as applicable) | Entering this feature code selects an outgoing trunk and automatically dials the programmed Emergency Call number, which is routed by default out Trunk Group 1. |
| Outgoing Call                   | 8                                 | Selects an outgoing trunk according to the programmed outgoing access mode for that phone.   |

## Phone Feature Codes

Table 24 lists phone feature codes.

**Table 24.** *Phone Feature Codes*

| Feature Name   | Code              | Definition   |
|--|-------------------|--|
| Account Code – All Calls Following                                   | 391               | Allows the phone user to enter a forced or optional account code that will apply to all calls following the entry of this feature code and will appear in the SMDR. To disable the All Calls Following feature, the feature code is entered again without an account code. |
| Account Code – Optional  | 390               | Allows the phone user to enter an optional account code for SMDR reports during an outside call.   |
| ACD Agent Login<br>ACD Agent Logout<br>ACD Agent Login/Logout Toggle | 326<br>327<br>328 | These feature codes allow an ACD hunt group member (agent) to log into and out of one or more ACD hunt groups. The agent will only receive calls through the ACD hunt group while logged in.   |
| ACD Agent Wrap-Up Terminate  | 329               | When an ACD agent completes a call, no other ACD hunt group call will ring at the phone until the ACD Wrap-Up Timer expires or the agent enters this feature code to terminate the wrap-up session.  |
| Activate Door Relay  | 332               | If enabled, activates a door relay switch on the system to unlock a door (i.e., “buzz” it open).   |
| Agent Help   | 375               | The Agent Help feature allows a phone user to request help from a designated “Agent Help Extension” during a two- or three-party call.   |
| Agent Help Reject  | 376               | When a request-for-help call rings, the Agent Help Extension can choose to join the call or enter this feature code to reject the request.   |
| Answer (Ringing Call)  | 351               | Answers the call that has been ringing or holding the longest at that phone.   |
| Audio Diagnostics  | 320               | When initiated, users are prompted to answer questions about the audio problems by pressing specific keypad buttons.   |

**Table 24.** Phone Feature Codes (Continued)

| Feature Name                   | Code | Definition   |
|--------------------------------|------|--|
| Automatic CO Access On/Off     | 360  | <i>(Not used on single line phones)</i> Allows the phone user to determine how ringing outside calls will be answered: simply by lifting the handset or pressing the Speaker button (automatic answer), or by lifting the handset or pressing the Speaker button and pressing a Call button, individual trunk button or the ANSWER button. |
| Automatic IC Access On/Off     | 361  | <i>(Not used on single line phones)</i> Allows the phone user to determine how ringing intercom calls will be answered: simply by lifting the handset (automatic answer), or by lifting the handset and pressing the IC button (or a Call button, if there is no IC button).   |
| Automatic Trunk Answer         | 350  | Using this feature code, phone users with allowed answer can pick up trunks that are ringing into the system, but that are not actually ringing at their phones. This feature does not pick up transferred calls or recalls that are ringing at the phone.   |
| Background Music On/Off        | 313  | <i>(Not used on single line phones)</i> Turns on and off background music heard through the phone speaker.   |
| Barge-In                       | 386  | Allows the supervisor to barge-in on a call to help the hunt group member/agent.   |
| Call Forward All Calls         | 355  | Immediately forwards all calls to another phone or to an outside phone number.   |
| Call Forward If Busy           | 357  | Immediately forwards all calls to another phone or to an outside phone number when the phone is in use.  |
| Call Forward If No Answer      | 356  | Forwards all calls to another phone or to an outside phone number if not answered within a predetermined time.   |
| Call Forward If No Answer/Busy | 358  | Forwards all calls to another phone or to an outside phone number if not answered within a predetermined amount of time, or immediately if the phone is in use.  |
| Call Logging                   | 333  | Allows users of display phones to view missed, received, and dialed calls.   |
| Change Language                | 301  | A phone user can change the assigned language for the phone by entering the Change Language feature code while the phone is idle.  |
| CO Hookflash                   | 330  | Sends a timed hookflash over the trunk while on an outside call (includes conference calls).   |
| Conference                     | 5    | Connects from three to four parties in an Ad Hoc Conference, which consists of any combination of inside and outside parties.  |
| Data                           | 340  | Allows operation of a data device attached to a digital telephone. Requires a modem-equipped data device. Supported on 5000 CP systems equipped with appropriate digital interface equipment.  |
| Default Station                | 394  | This single feature code cancels account codes for all calls following, Do-Not-Disturb, manual call forwarding, background music, ring intercom always, and queue requests; restores handsfree mode, pages, hunt group calls, and system forwarding; and returns phone volumes to default values.  |

**Reference**  
**Phone Feature Codes**

**Table 24. Phone Feature Codes (Continued)**

| Feature Name   | Code              | Definition  |
|--|-------------------|---|
| Directories  | 307               | <i>(Display phones Only)</i> Allows display phone users to search for extension numbers or System Speed Dial numbers. The number can then be dialed, if appropriate.  |
| Display Hardware Serial Number   |                   | <i>(Display phones Only)</i> When the phone user enters this feature code, the phone displays the system's license key ID.  |
| Display Outside Party Name On/Off  | 379               | <i>(Display phones Only)</i> When the phone user enters this feature code, while connected to a CO call that has outside party name information, the display will toggle between the caller's name and number. If there is no outside party name or the Expanded CO Call Information On Displays flag is disabled, the user will hear a burst of reorder tone and see the CANNOT ACCESS FEATURE display. If the Display Outside Party Name On/Off feature code is programmed in a user programmable button with a lamp, the lamp will be lit when the outside party name is enabled and off when the outside party number is enabled. |
| Display Time/Date (ITP)<br>Show IP Address (SIP)   | 300               | <i>(Display phones Only)</i> Temporarily displays the system date and time, user name, and extension number during a call or when other displays are shown.<br>Feature code 300 displays the IP Address of a phone if it is in SIP mode.  |
| Do-Not-Disturb<br>Do-Not-Disturb Cancel<br>Do-Not-Disturb On/Off                             | 370<br>371<br>372 | The Do-Not-Disturb feature code halts all intercom calls, transferred calls, and pages to the phone. The Cancel code returns the phone to normal operation. The on/off code can be used to turn Do-Not-Disturb on or off.   |
| Do-Not-Disturb Override  | 373               | <i>(Not used on single line phones)</i> If enabled in the database, allows the phone user to break through another phone's Do-Not-Disturb mode when placing an intercom call.   |
| Dynamic Extension Express On<br>Dynamic Extension Express Off<br>Dynamic Ext. Express On/Off | 363<br>362<br>364 | Allow the user to enable or disable the Dynamic Extension Express (formerly called Personal Call Routing) feature.  |
| Dynamic Ext. Express – Handoff   | 388               | Provides the following functions:<br><i>Push:</i> Allows the user to push an active call from his or her main extension to an associated destination without disconnecting audio.<br><i>Pull:</i> Allows the user connected to an active call on a mobile or home phone to pull the call back to his or her main extension.   |
| Enhanced Speakerphone Enable   | 310               | <i>(Digital telephones only)</i> When entered at a digital telephone, this feature code enables the enhanced speakerphone. Digital telephones can also use the Special button + Speaker buttons.  |
| Feature Key Default  | 395               | <i>(Not used on single line phones)</i> Phones have user-programmable feature buttons that can be set to enter feature codes. This code returns the user-programmable buttons to the database default values.   |
| Group Listen   | 312               | <i>(Not used on single line phones)</i> Allows a user to transmit a conversation over the phone speaker while in handset or headset mode.   |

**Table 24. Phone Feature Codes (Continued)**

| Feature Name   | Code              | Definition   |
|--|-------------------|--|
| Handsfree On/Off   | 319               | <i>(Not used on single line phones)</i> Disables/enables the phone's handsfree intercom answering. Incoming intercom calls ring as private calls if handsfree answering is disabled.   |
| Headset Enable<br>Headset Disable<br>Headset On/Off                  | 315<br>316<br>317 | <i>(Not used on single line phones)</i> The enable code signals the system that a headset has been connected to the phone. The disable code returns the phone to normal operation. The on/off feature code can be used to toggle the feature on or off.  |
| Hold – Individual  | 336               | Places a call on hold so that it can be picked up directly at that phone or through a reverse transfer from any other phone.   |
| Hold – System  | 335               | Places an outside call on system hold. It can be picked up directly at any phone that has an individual trunk button and has allowed-answer and/or outgoing access for that trunk, or by the phone that placed it on hold. (If used on conference or intercom calls, the system places the call on individual hold.) |
| Hot Desk On/Off  | 348               | Allows the phone user to log on to a Hot Desk-enabled base phone or log off of a Hot Desk session.   |
| Hunt Group Remove<br>Hunt Group Replace<br>Hunt Group Remove/Replace | 322<br>323<br>324 | Removes the phone from its assigned hunt group(s) or places it in again. Does not affect non-hunt group calls. The remove/replace feature code can be used to toggle the feature.  |
| LCD Contrast Adjustment  | 303               | Adjusts the LCD contrast on the display. The phone must be idle to use this feature.   |
| Message  | 365               | This feature code is used for leaving and retrieving a message waiting indication at a called phone or the called phone's message center. Depending on how the message was left, the called phone user either retrieves the message from his/her message center or from the phone that left the message.             |
| Message – Cancel   | 366               | Allows the phone user to cancel a message waiting indication that he or she left at another phone.   |
| Message – Cancel Current   | 368               | Cancels a message waiting indication that is waiting at the phone without requiring the user to respond to it.   |
| Message – Silent   | 367               | Leaves a Message Waiting indication at a phone without first placing an intercom call.   |
| Mute On/Off  | 314               | <i>(Not used on single line phones)</i> Turns the microphone on or off during a call. If muted, the phone user can hear the other party, but the party cannot hear the phone user.   |
| Page   | 7                 | When followed by a paging zone code (0–9 or 0–49), it allows announcements to be made through phone speakers and any external paging speakers in the page zone.  |
| Page On/Off  | 325               | <i>(Not used on single line phones)</i> Halts pages through the phone speaker or allows them to be received again.   |
| Program Buttons  | 397               | <i>(Not used on single line phones)</i> User-programmable feature buttons and Station Speed Dial buttons can be programmed using this feature code.  |

**Reference**  
**Phone Feature Codes**

**Table 24. Phone Feature Codes (Continued)**

| Feature Name                                | Code       | Definition  |
|---|------------|---|
| Program Station Passcode                    | 392        | The station passcode is used for the Remote Programming feature. The passcode can be changed by entering the Program Station Passcode feature code at the phone or when using the Remote Programming feature.   |
| Queue Request                               | 6          | Requests (or cancels) an automatic callback when a busy trunk or phone becomes available.   |
| Record-A-Call                               | 385        | If the system is programmed with a Record-A-Call application, the phones can be programmed to use the Record-A-Call feature. It allows users to enter a feature code whenever they want to record an ongoing call in their designated Record-A-Call mailbox. Users can retrieve the recorded messages later, just as they would any other mailbox messages.                     |
| Redial                                      | 380        | Redials the last outside phone number dialed or saved at the phone (up to 48 digits). Also used to save numbers at phones programmed for last number saved.   |
| Redirect Call                               | 331        | Allows the phone user to route ringing outside, intercom, and camped on calls to another phone, hunt group, or outside number. Routing of the redirected call is still subject to trunk and toll restrictions. This feature provides these options in addition to the currently available options which allow the phone user to redirect calls to Voice Mail or Do-Not-Disturb. |
| Reminder Message<br>Reminder Message Cancel | 305<br>306 | <i>(Not used on single line phones)</i> The phone user can set reminder messages that signal the phone at specific times. Or, the user can cancel all reminder messages for the phone.  |
| Remote Configuration – Disable              | 343        | <i>Reserved for controlled introduction.</i> Disables the Remote Configuration feature. The VPN connection from the Remote Proxy Server to the 5000 CP is terminated.   |
| Remote Configuration – Display License Key  | 347        | <i>Reserved for controlled introduction.</i> Displays the license key ID (HASP key) for the 5000 CP.  |
| Remote Configuration – Enable               | 342        | <i>Reserved for controlled introduction.</i> Enables a Remote Configuration session. The Virtual Private Network (VPN) connection from the 5000 CP to the Remote Proxy Server is initiated.   |
| Remote Configuration – Reset                | 344        | <i>Reserved for controlled introduction.</i> Resets a Remote Configuration session. The VPN connection from the 5000 CP to the Remote Proxy Server is reset.  |
| Remote Programming                          | 359        | Allows a user to place a phone in DND mode, forward the phone's calls, or change the passcode; either from another phone or through DISA.   |
| Reverse Transfer (Call Pick-Up)             | 4          | Picks up a call ringing or holding at a phone or hunt group.  |
| Review Keys                                 | 396        | <i>(Not used on single line phones)</i> User-programmable feature buttons and Station Speed Dial buttons can be viewed using this feature code.   |
| Ring Intercom Always On/Off                 | 377        | Enables/disables the feature that allows the phone to always place private (non-handsfree) intercom calls.  |
| Ring Tone Selection                         | 398        | <i>(Not used on single line phones)</i> Selects the type of ringing alert tone that will be heard from the phone.   |

**Table 24.** Phone Feature Codes (Continued)

| Feature Name   | Code              | Definition  |
|--|-------------------|---|
| Routing Off  | 304               | Disables System OAI Offering Control for third-party applications. This feature requires you to enter a passcode. Once you disable routing, you cannot enable it again (i.e., only the third-party application can enable routing). |
| Station Monitor  | 321               | <i>(Hunt Group supervisors only)</i> Allows a designated hunt group supervisor to monitor a call of anyone in the associated hunt group.  |
| Station Speed Dial<br>Station Speed Dial Programming                     | 382<br>383        | Dials/programs one of the 10 Station Speed Dial numbers when followed by a location code (0–9).   |
| Steal  | 387               | Allows the supervisor to take away a call from the hunt group member/agent.   |
| Switch Keymap  | 399               | <i>(Not used on single line phones)</i> Allows a phone user to switch between standard and alternate keymaps.   |
| System Forward Enable<br>System Forward Disable<br>System Forward On/Off | 352<br>353<br>354 | Enables or disables the database-programmed System Forwarding feature for this phone. The on/off feature code can be used to toggle the feature on or off.  |
| System Speed Dial  | 381               | Dials one of the 1000-5000 System Speed Dial phone numbers when followed by a location code (000–999 or 0000-4999). Also used for reviewing System Speed Dial numbers.  |
| Transfer to Hold   | 346               | Transfers a call to another phone and places it on individual hold so that it does not ring or send call waiting signals until it recalls.  |
| Transfer to Ring   | 345               | Transfers a call to another phone or to an outside phone number.  |





# Index

## A

- Administrator
  - feature codes 58
  - phone
    - enabling or disabling 16
    - passcode, programming 23
    - troubleshooting 52
  - phone troubleshooting 52
  - programming planning sheets 3
  - types 2
- Alarms
  - clearing 44
  - descriptions 45
  - minor 43
  - network 43
  - system 43
- Answer Supervision Type, programming 30
- Attendant phones, enabling or disabling 17
- Automatic
  - daylight-saving time 13
  - Route Selection, ARS-only Class of Service 19
- Automatic Route Selection, ARS-only Class of Service 20

## B

- Busy Out, programming 35

## C

- Caller ID, programming 31
- Capacities, network 3
- Class of Service
  - ARS only 19, 20
  - European values 20
- Clearing alarms 44
- Codes
  - administrator feature 58
  - diagnostics feature 59
  - phone feature 62
  - trunk access 62

## D

- Day Mode, setting 12
- Day or Night Answer Access, programming 36
- Day or Night Ring-in, programming 37
- Device, seizing 48

- Diagnostics feature codes 59
- DND messages
  - programming 24
  - programming planning sheets 54
- DND messages, Japanese language 24

## E

- Emergency calls, toll restriction override 19
- English, multicultural references 4
- Extension numbers
  - changing 26
  - swapping 27

## F

- Feature codes
  - administrator 58
  - diagnostics 59
  - phone 62
- Flowcharts
  - Station programming 22
  - System programming 28
  - Trunk programming 40
- Freeze and unfreeze
  - network history 49
  - system history 49

## H

- History
  - network 49
  - system 49
- Hookflash, speed dial 14

## I

- Individual trunk programming planning sheets 57
- Internal modem
  - enabling and disabling 46
  - resetting 46

## J

- Japanese language
  - DND messages 24
  - Reminder messages 25

### M

---

Major alarms 43

Messages

DND, programming 24

Reminder, changing 25

Minor alarms 43

Mode, Day or Night 12

Modem

internal, enabling and disabling 46

internal, resetting 46

Multicultural English references 4

Multi-node configuration 12

### N

---

Network

alarms 43

capacities 3

history, freezing and unfreezing 49

single and multi-node configurations 12

synchronizing time 13

Night Mode, setting 12

### P

---

Passcodes, administrator phone 23

Pause, speed dial 14

PBX trunks, speed dialing 14

Phone

attendant, enabling or disabling 17

extension

numbers, changing 26

user names, programming 18

Phone feature codes 62

Programming planning sheets

administrator phone passcode 53

DND messages 54

individual trunk programming 57

phone information 53

Reminder messages 55

station extension numbers 56

swapping stations 56

trunk groups 57

Provider information 52

### R

---

Reminder Messages

changing 25

Japanese language 25

programming planning sheets 55

### S

---

Single node configuration 12

Speed dial

pauses and hookflashes 14

System 14

Stations

numbers, programming planning sheets 56

swapping, programming planning sheets 56

Synchronize network time 13

System

alarms 43

date and time, setting 13

history, freezing and unfreezing 49

programming options 23

Speed Dial

deleting names or numbers 14

toll restriction override 19

using 14

### T

---

Time

daylight saving, automatic 13

setting 13

Toll restrictions

COS override for emergency calls 19

programming 19

Troubleshooting

administrator phone 52

administrator phone features 52

Trunk groups

assigning trunks to 34

Day or Night Answer Access, programming 36

Day or Night Ring-in, programming 37

programming planning sheets 57

trunk lists, programming 39

Trunks

access codes 62

Answer Supervision Type, programming 30

assigning to trunk groups 34

Busy Out, programming 35

Caller ID, programming 31

polarity reversal 29

Valid Call Timer 29

### U

---

User names, programming 18



Part No. 580.8001  
Issue 5.0, February 2011



---

| Global Headquarters                            | U.S.   | EMEA   | CALA   | Asia Pacific                                       |
|--|--|--|--|--|
| Tel: +1(613) 592-2122<br>Fax: +1(613) 592-4784 | Tel: +1(480) 961-9000<br>Fax: +1(480) 961-1370 | Tel: +44(0)1291-430000<br>Fax: +44(0)1291-430400 | Tel: +1(613) 592-2122<br>Fax: +1(613) 592-7825 | Tel: +61(0) 2 9023 9500<br>Fax: +61(0) 2 9023 9501 |

[www.mitel.com](http://www.mitel.com)



For more information on our worldwide office locations, visit our website at [www.mitel.com/offices](http://www.mitel.com/offices)

THIS DOCUMENT IS PROVIDED TO YOU FOR INFORMATIONAL PURPOSES ONLY. The information furnished in this document, believed by Mitel to be accurate as of the date of its publication, is subject to change without notice. Mitel assumes no responsibility for any errors or omissions in this document and shall have no obligation to you as a result of having made this document available to you or based upon the information it contains.

M MITEL (design) is a registered trademark of Mitel Networks Corporation. All other products and services are the registered trademarks of their respective holders.

© Copyright 2011, Mitel Networks Corporation. All Rights Reserved.